




 **LORENZOLINE**

134G

Guillotine System
Giyotin Sistemi

PROFILES
PROFILLER

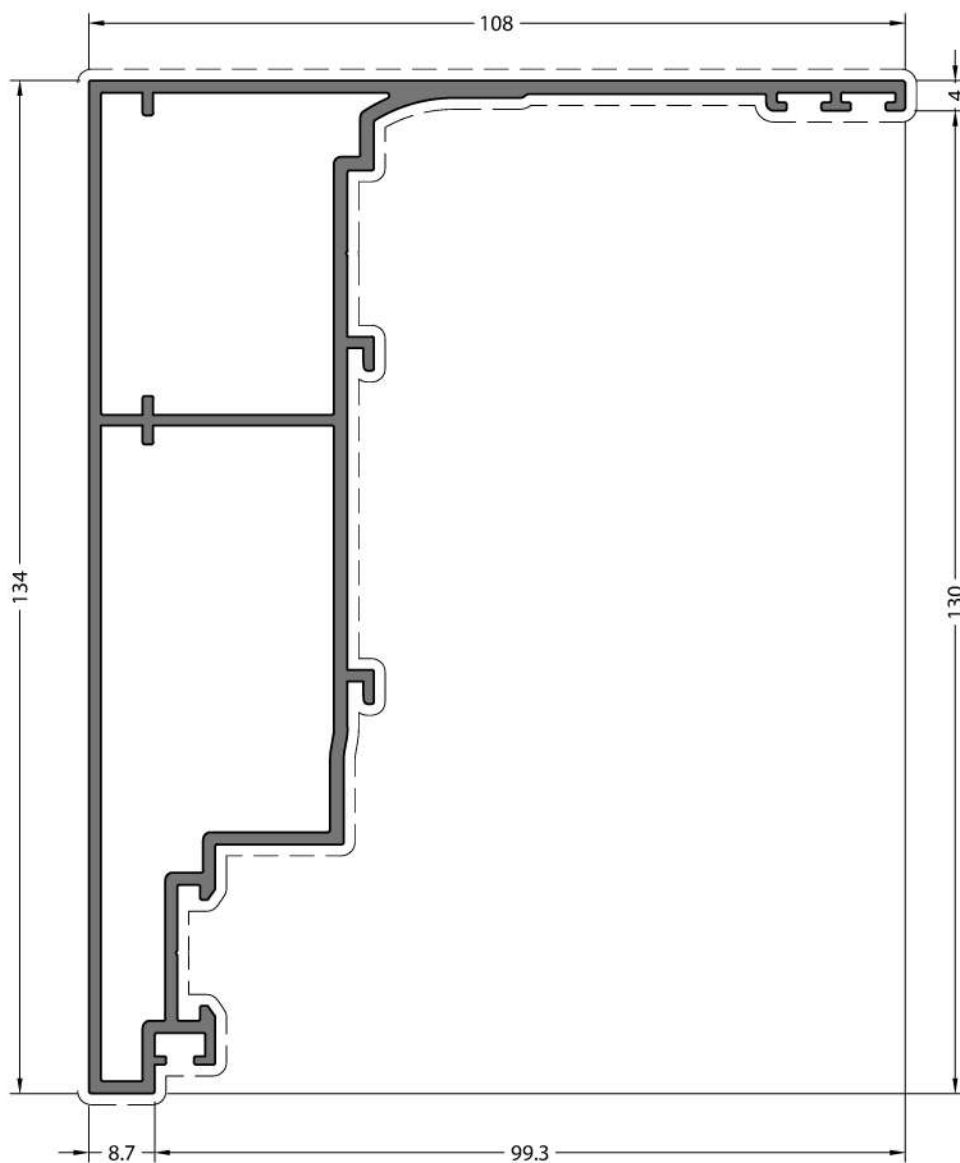


CODE / KOD

134G-101-16

THEORETICAL WEIGHT
TEORİK AĞIRLIK (kg/m)

2.176

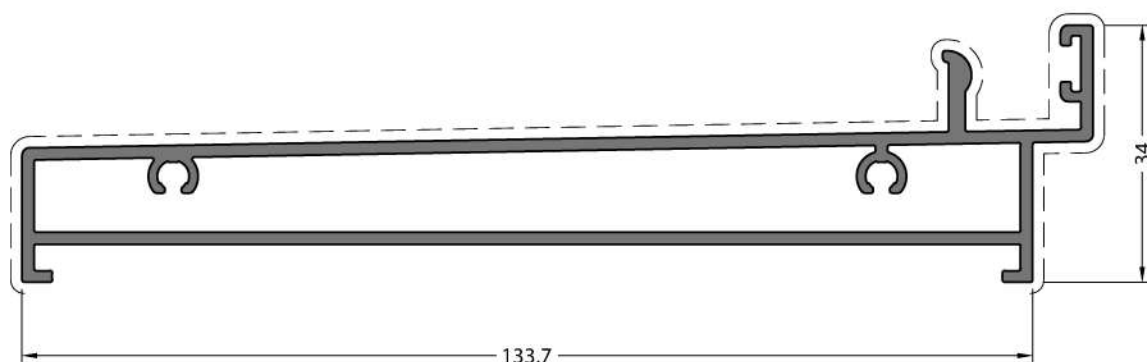


CODE / KOD

134G-102-16

THEORETICAL WEIGHT
TEORİK AĞIRLIK (kg/m)

1.591

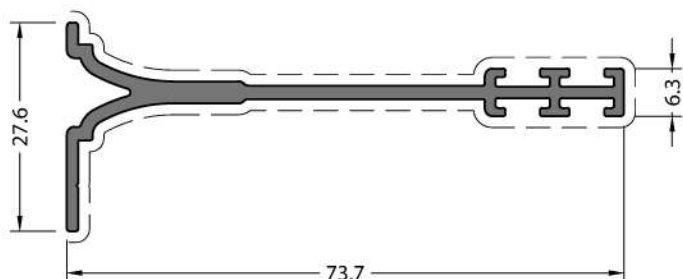


CODE / KOD

134G-105-18

THEORETICAL WEIGHT

TEORİK AĞIRLIK (kg/m)

0.594

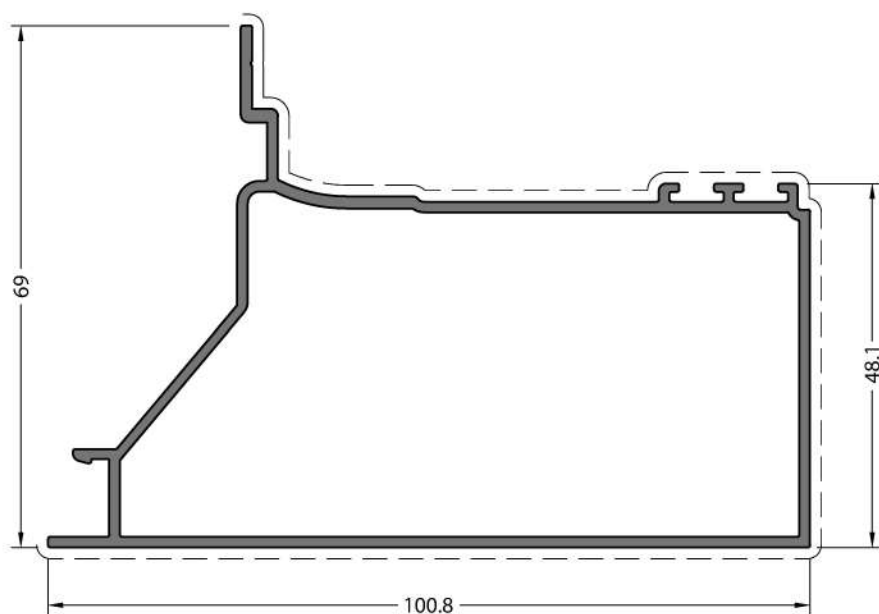


CODE / KOD

134G-106-14

THEORETICAL WEIGHT

TEORİK AĞIRLIK (kg/m)

1.182

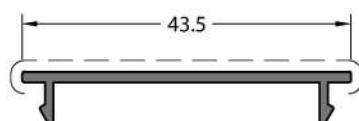


CODE / KOD

134G-107-00

THEORETICAL WEIGHT

TEORİK AĞIRLIK (kg/m)

0.201

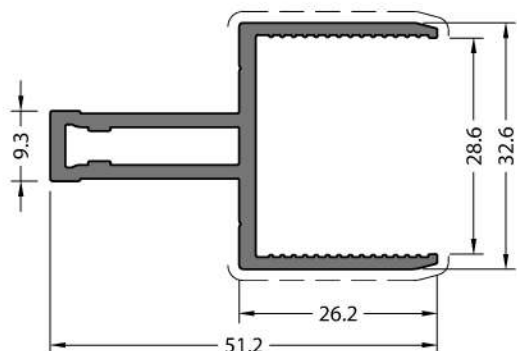


CODE / KOD

134G-201-00

THEORETICAL WEIGHT
TEORİK AĞIRLIK (kg/m)

0.691

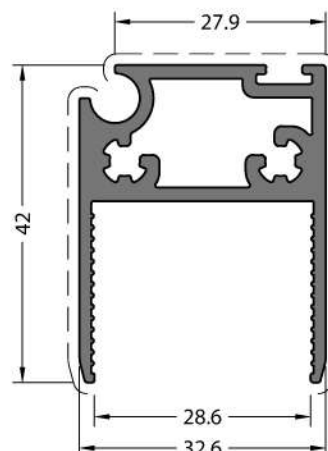


CODE / KOD

134G-202-00

THEORETICAL WEIGHT
TEORİK AĞIRLIK (kg/m)

0.891

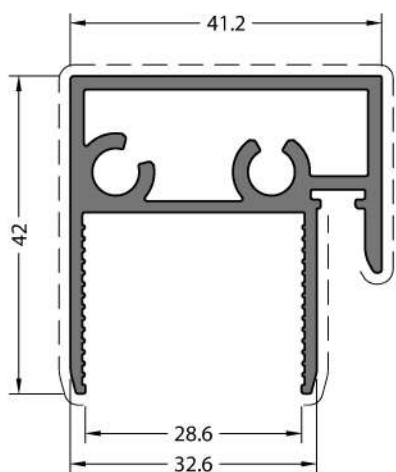


CODE / KOD

134G-203-00

THEORETICAL WEIGHT
TEORİK AĞIRLIK (kg/m)

0.987

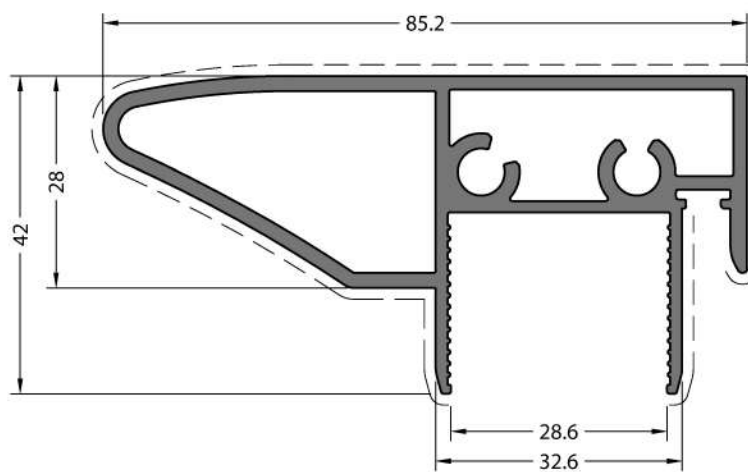


CODE / KOD

134G-204-00

THEORETICAL WEIGHT
TEORİK AĞIRLIK (kg/m)

1.500


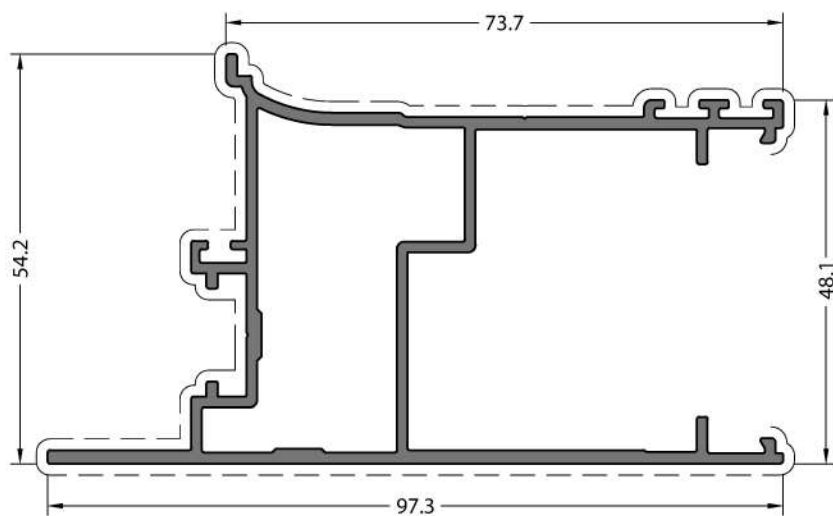


CODE / KOD



134G-211-00



THEORETICAL WEIGHT
TEORİK AĞIRLIK (kg/m)


1.328

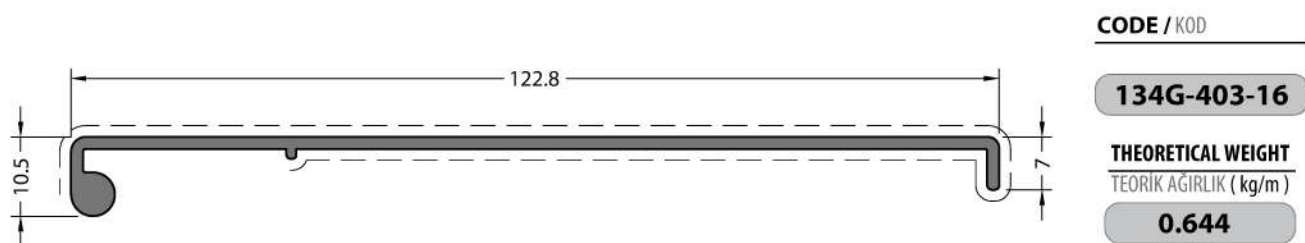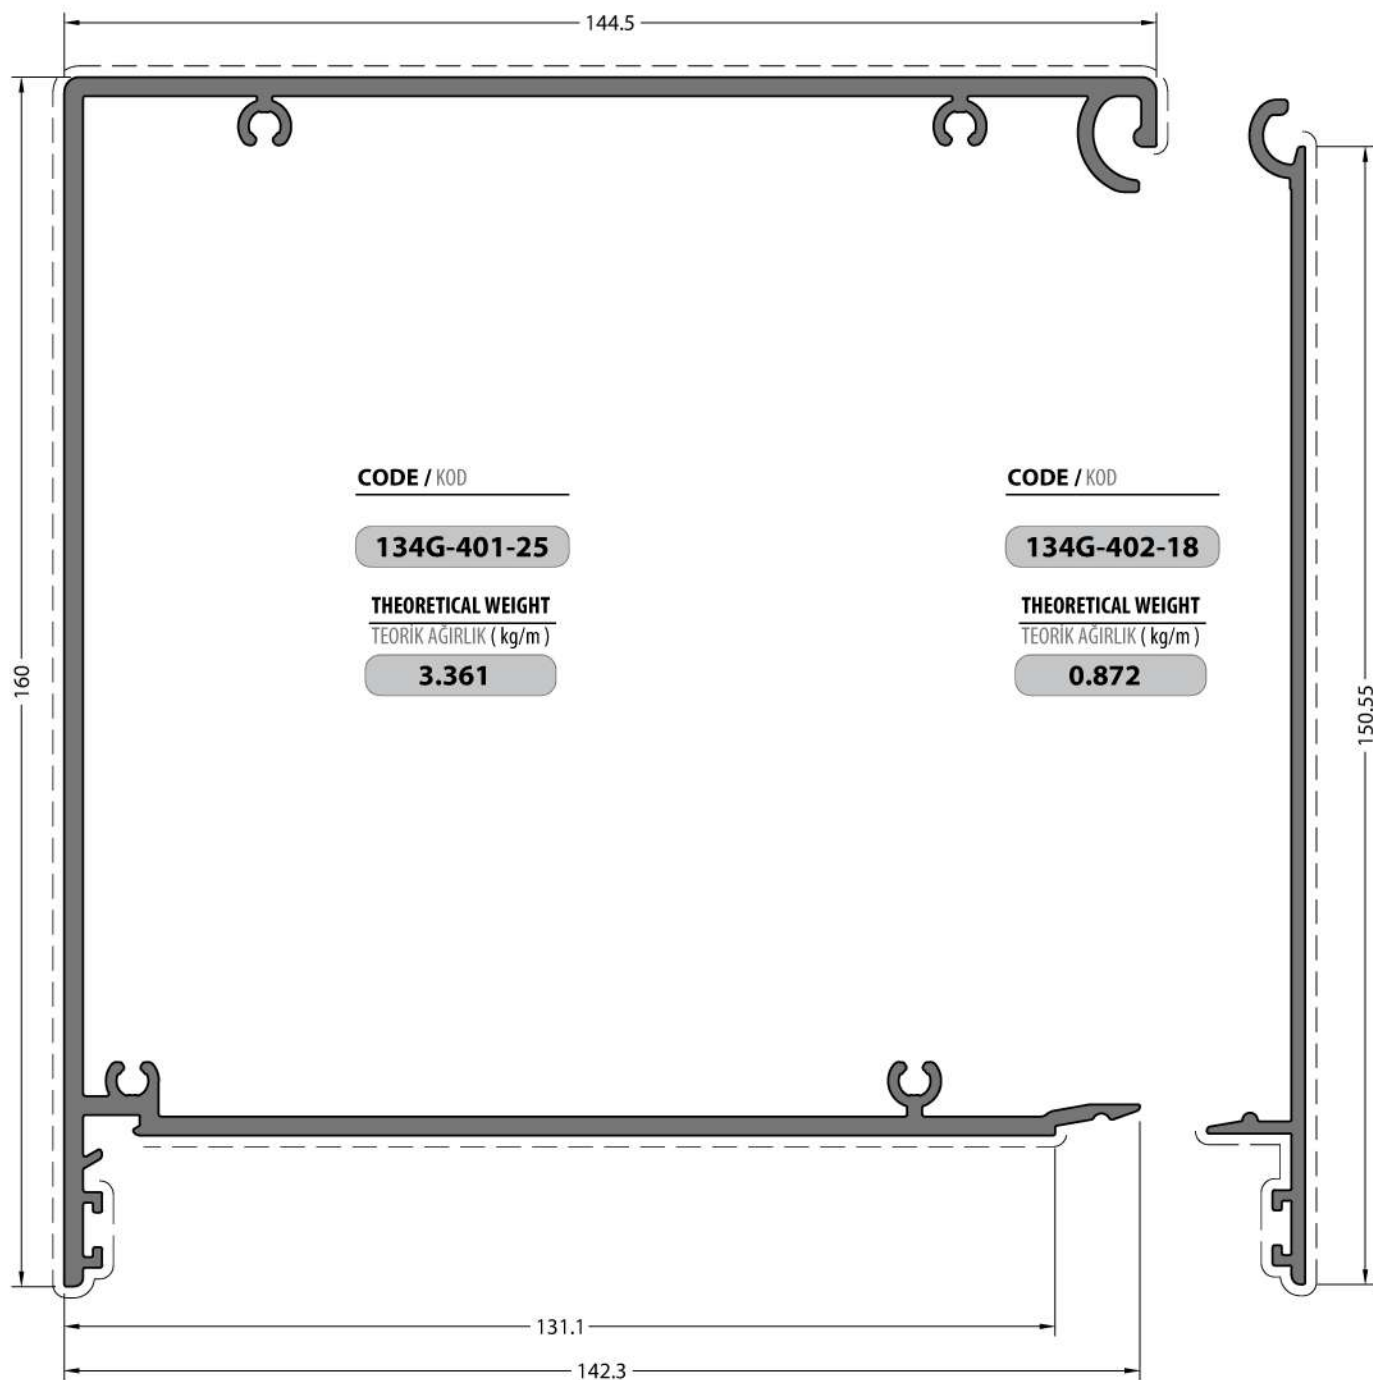



DETAILS
DETAYLAR

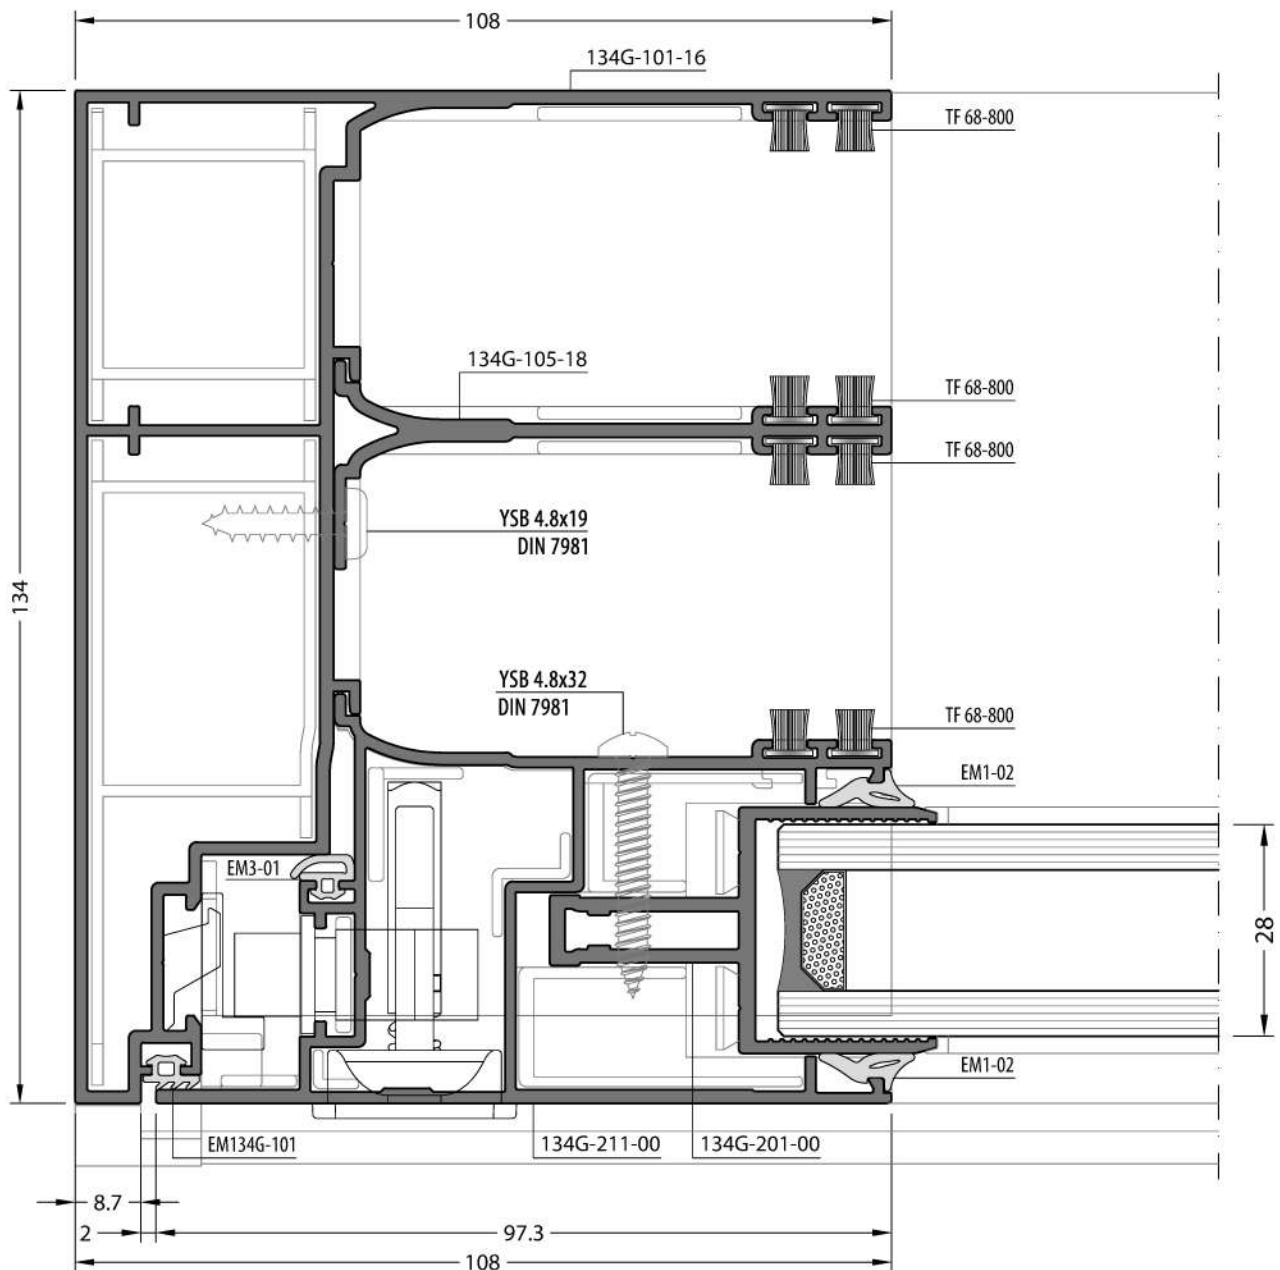
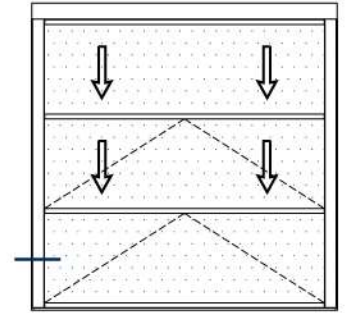


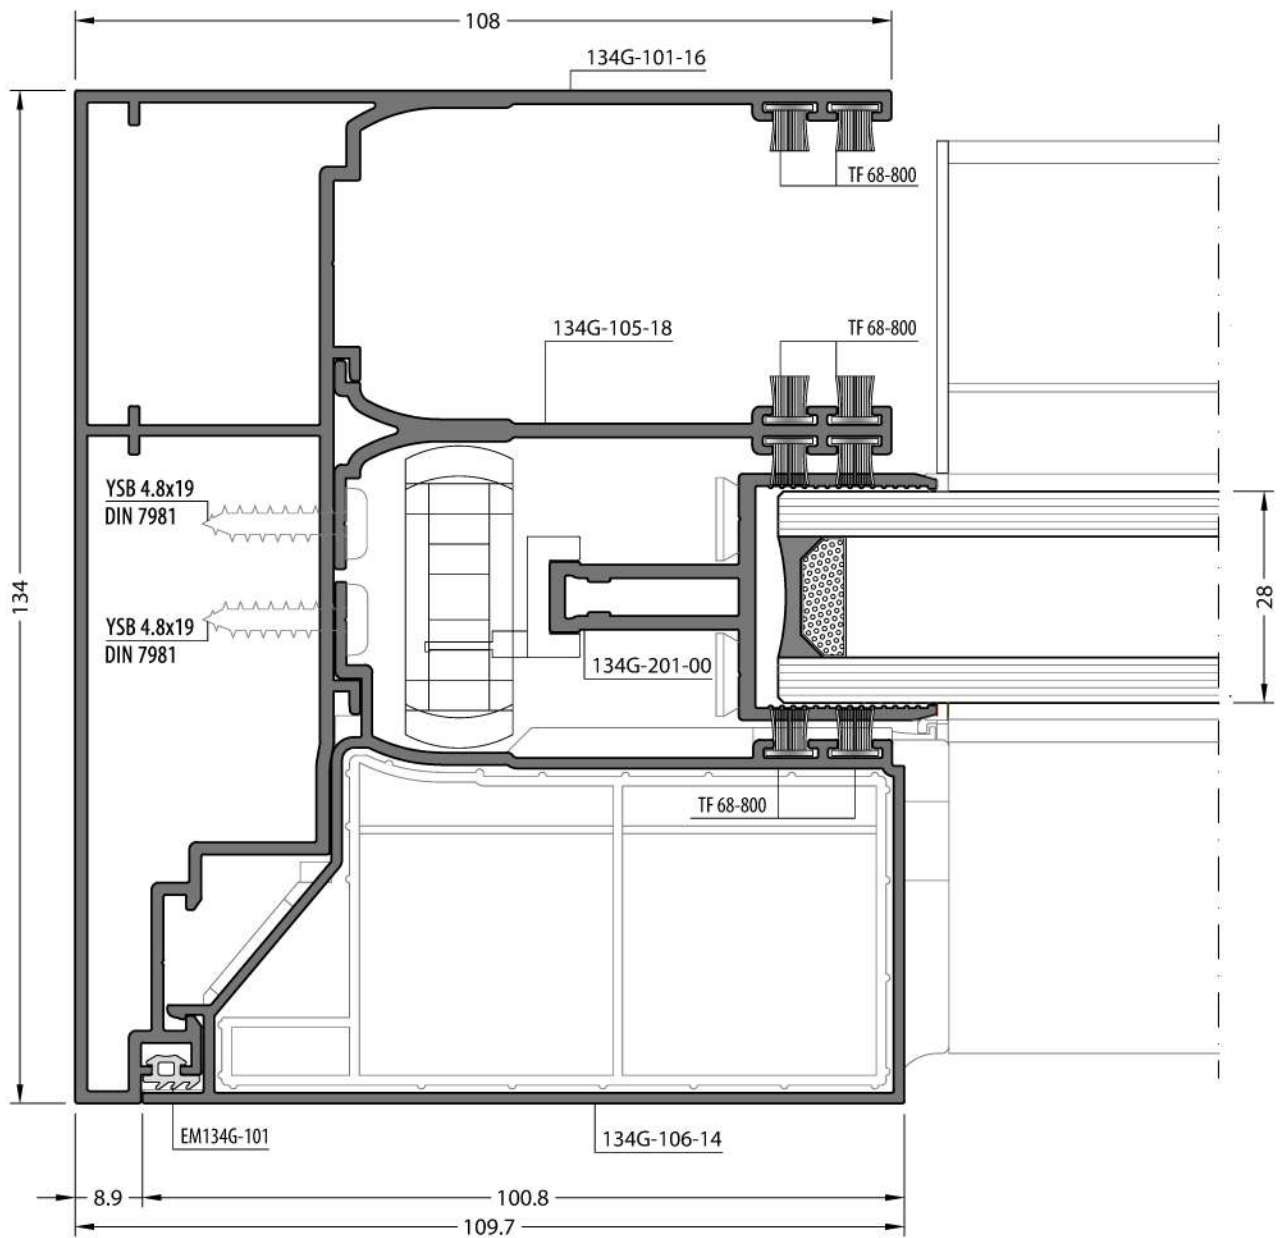
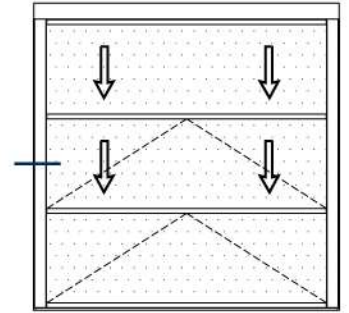


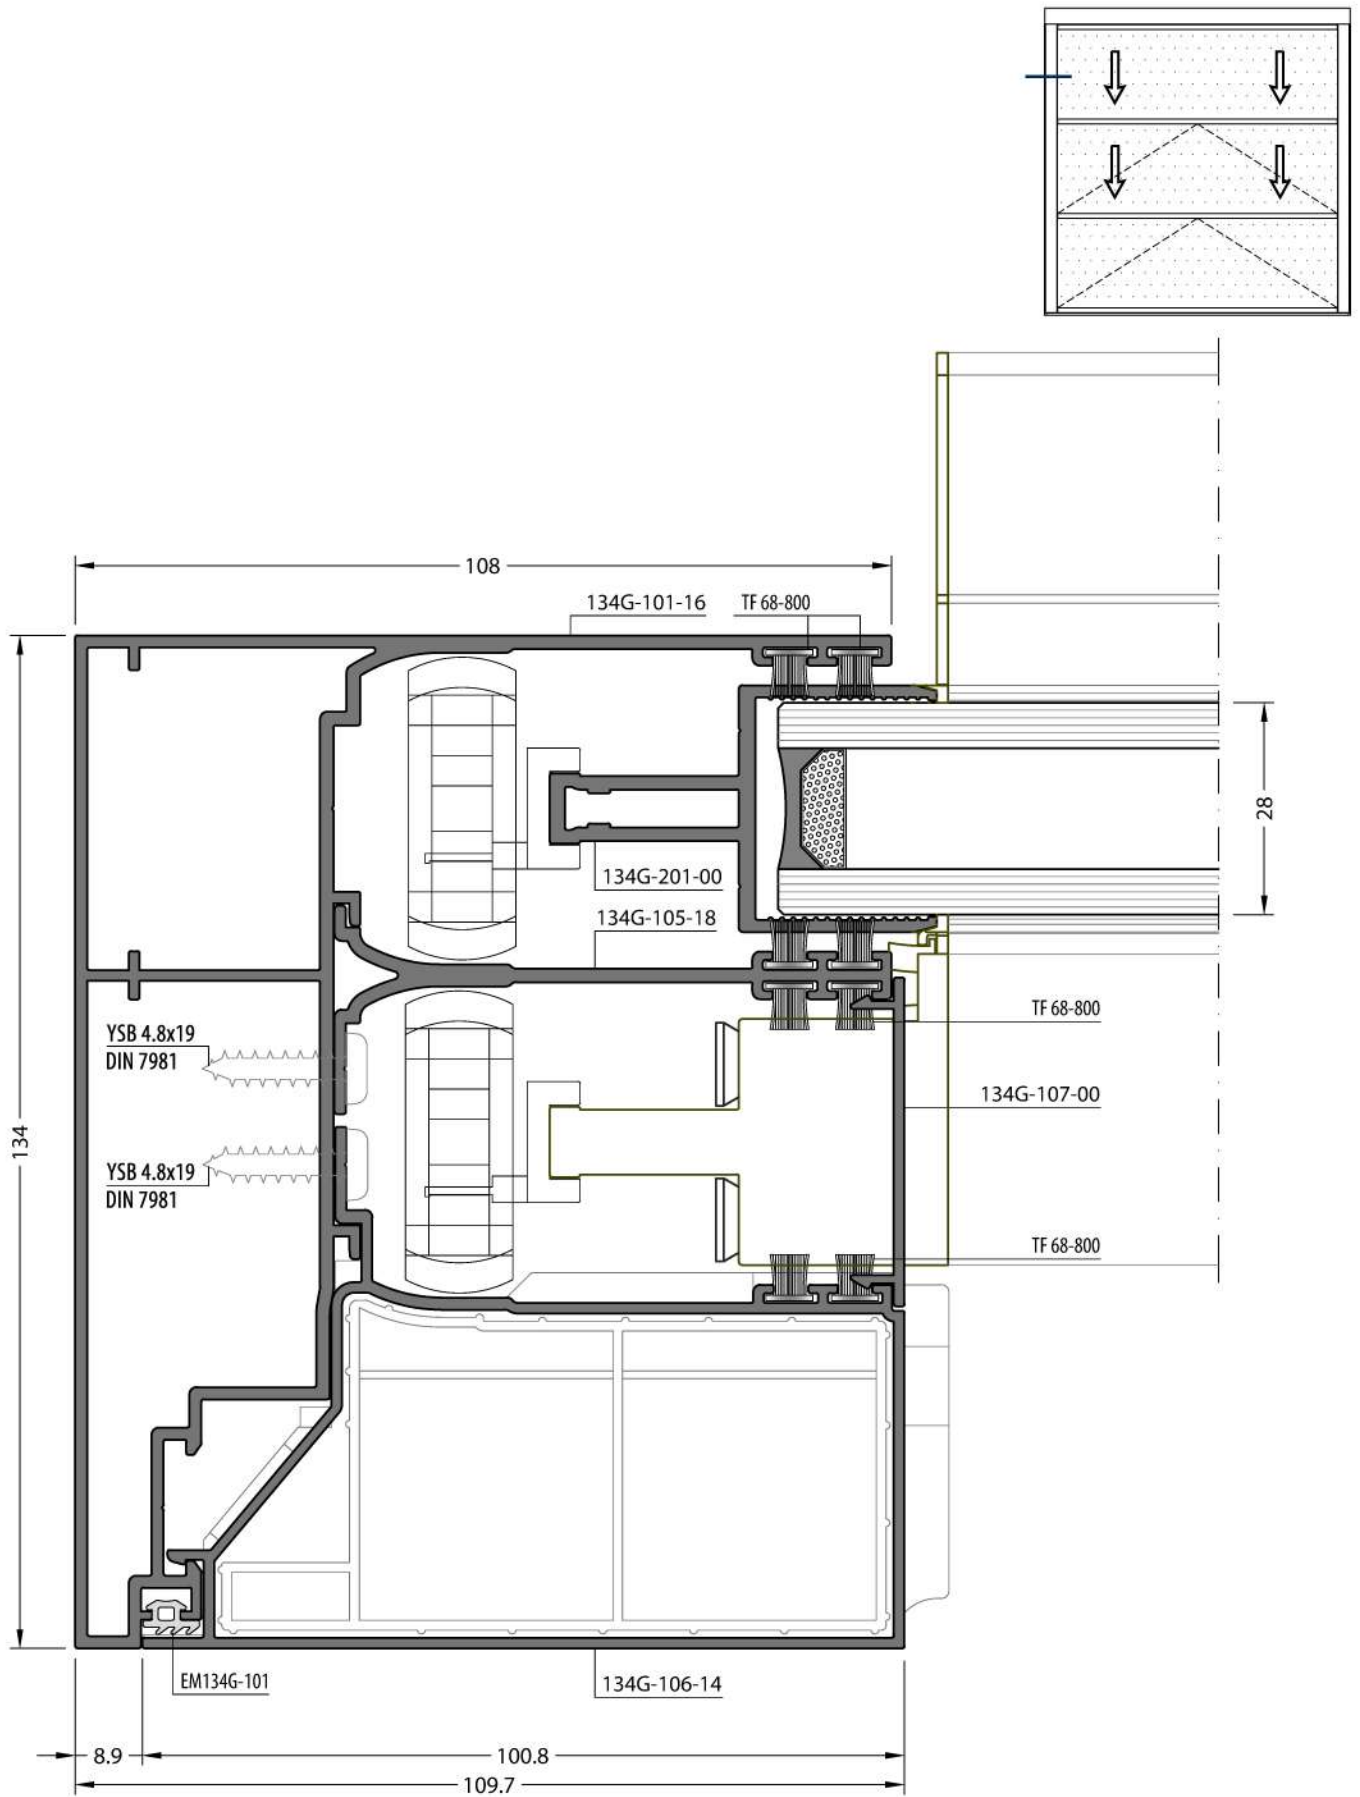

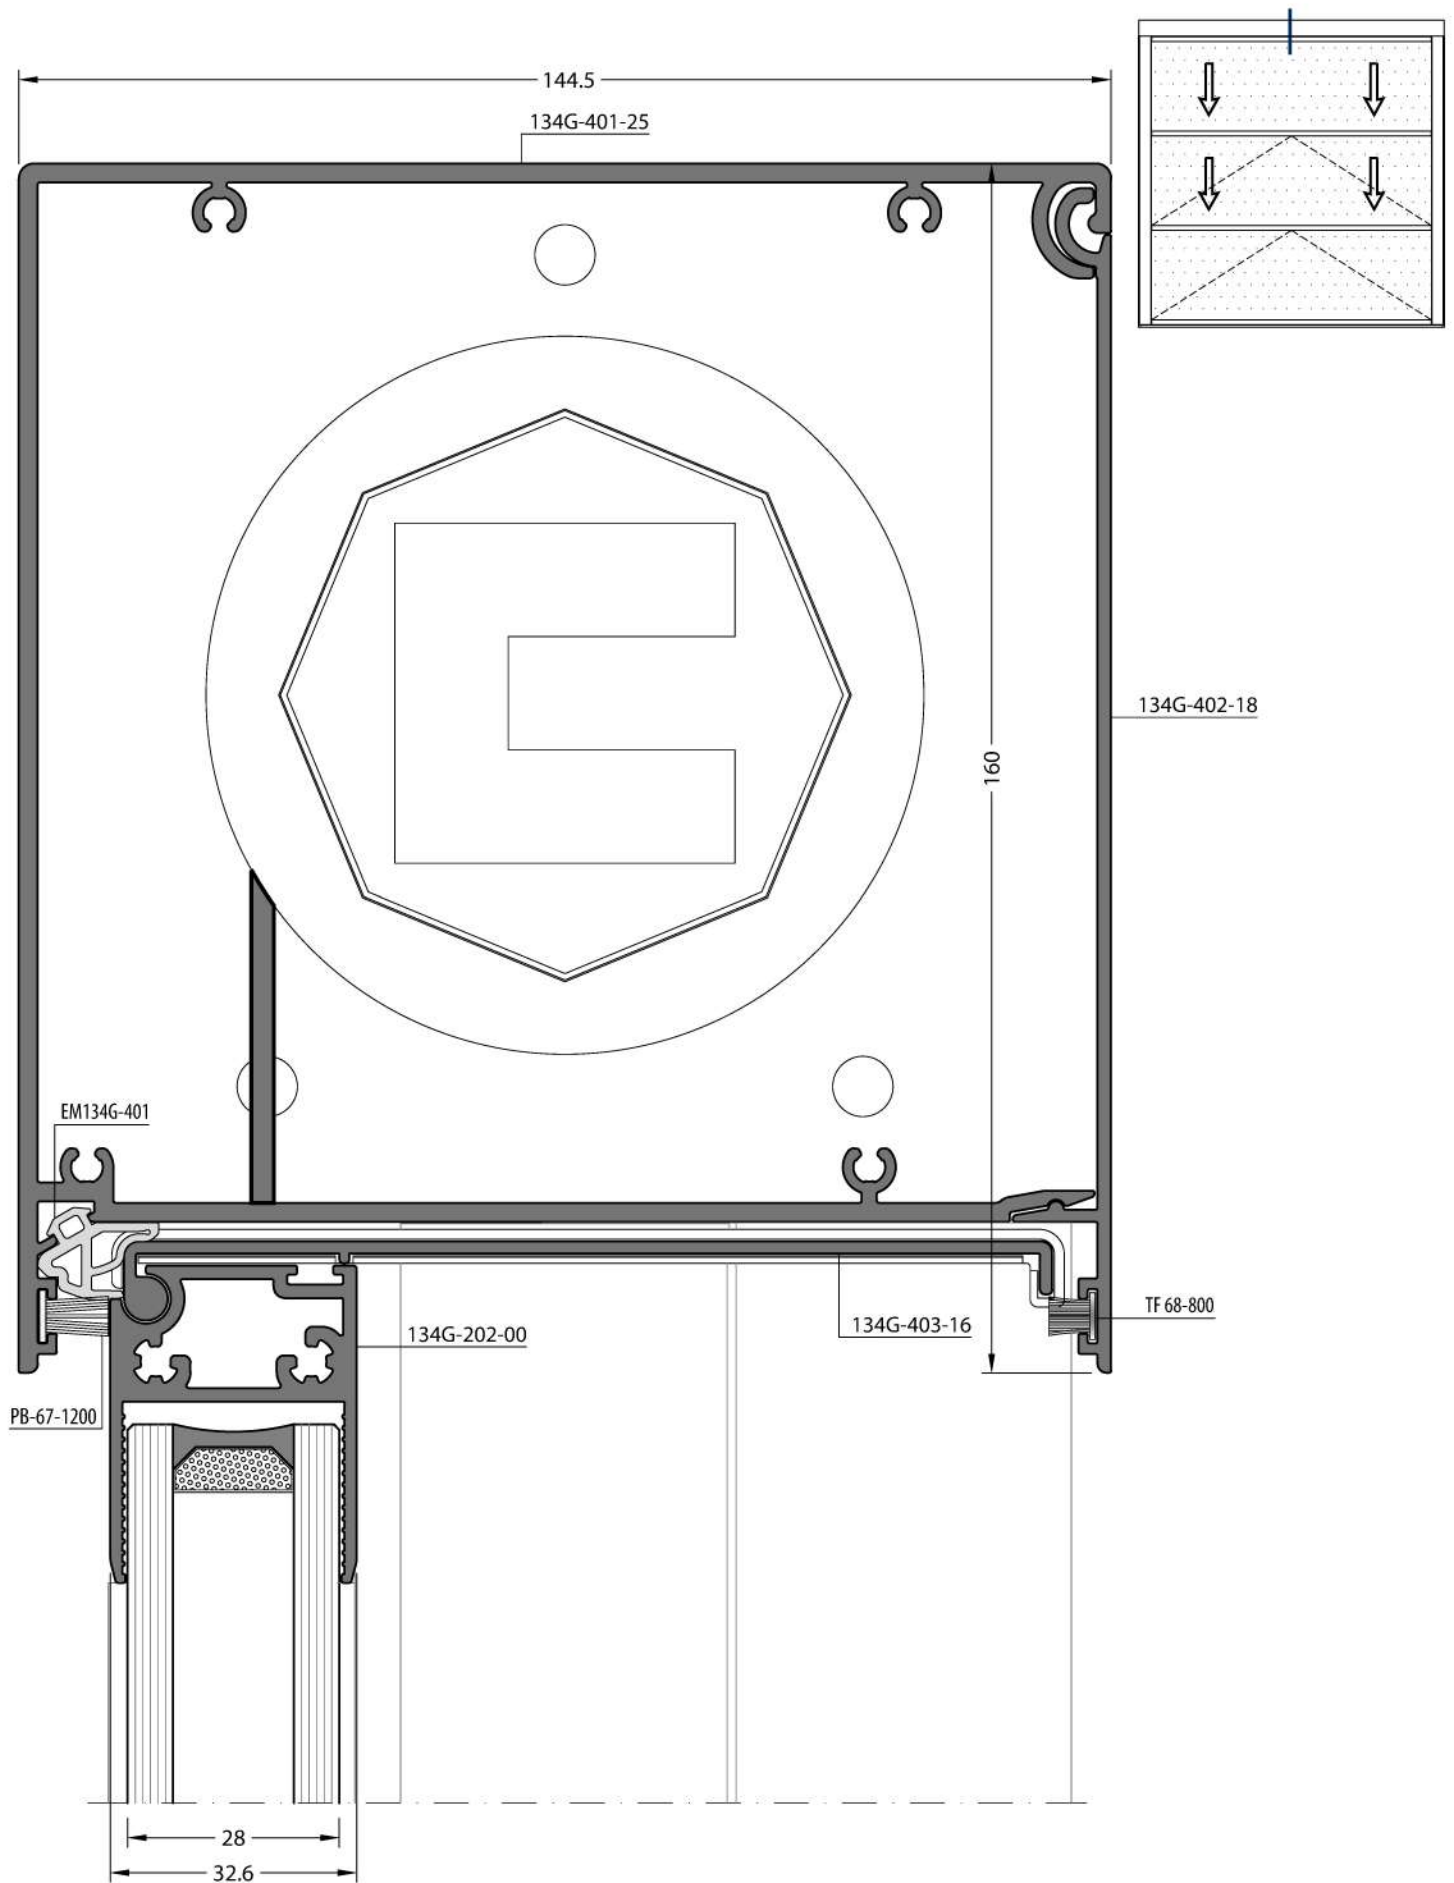






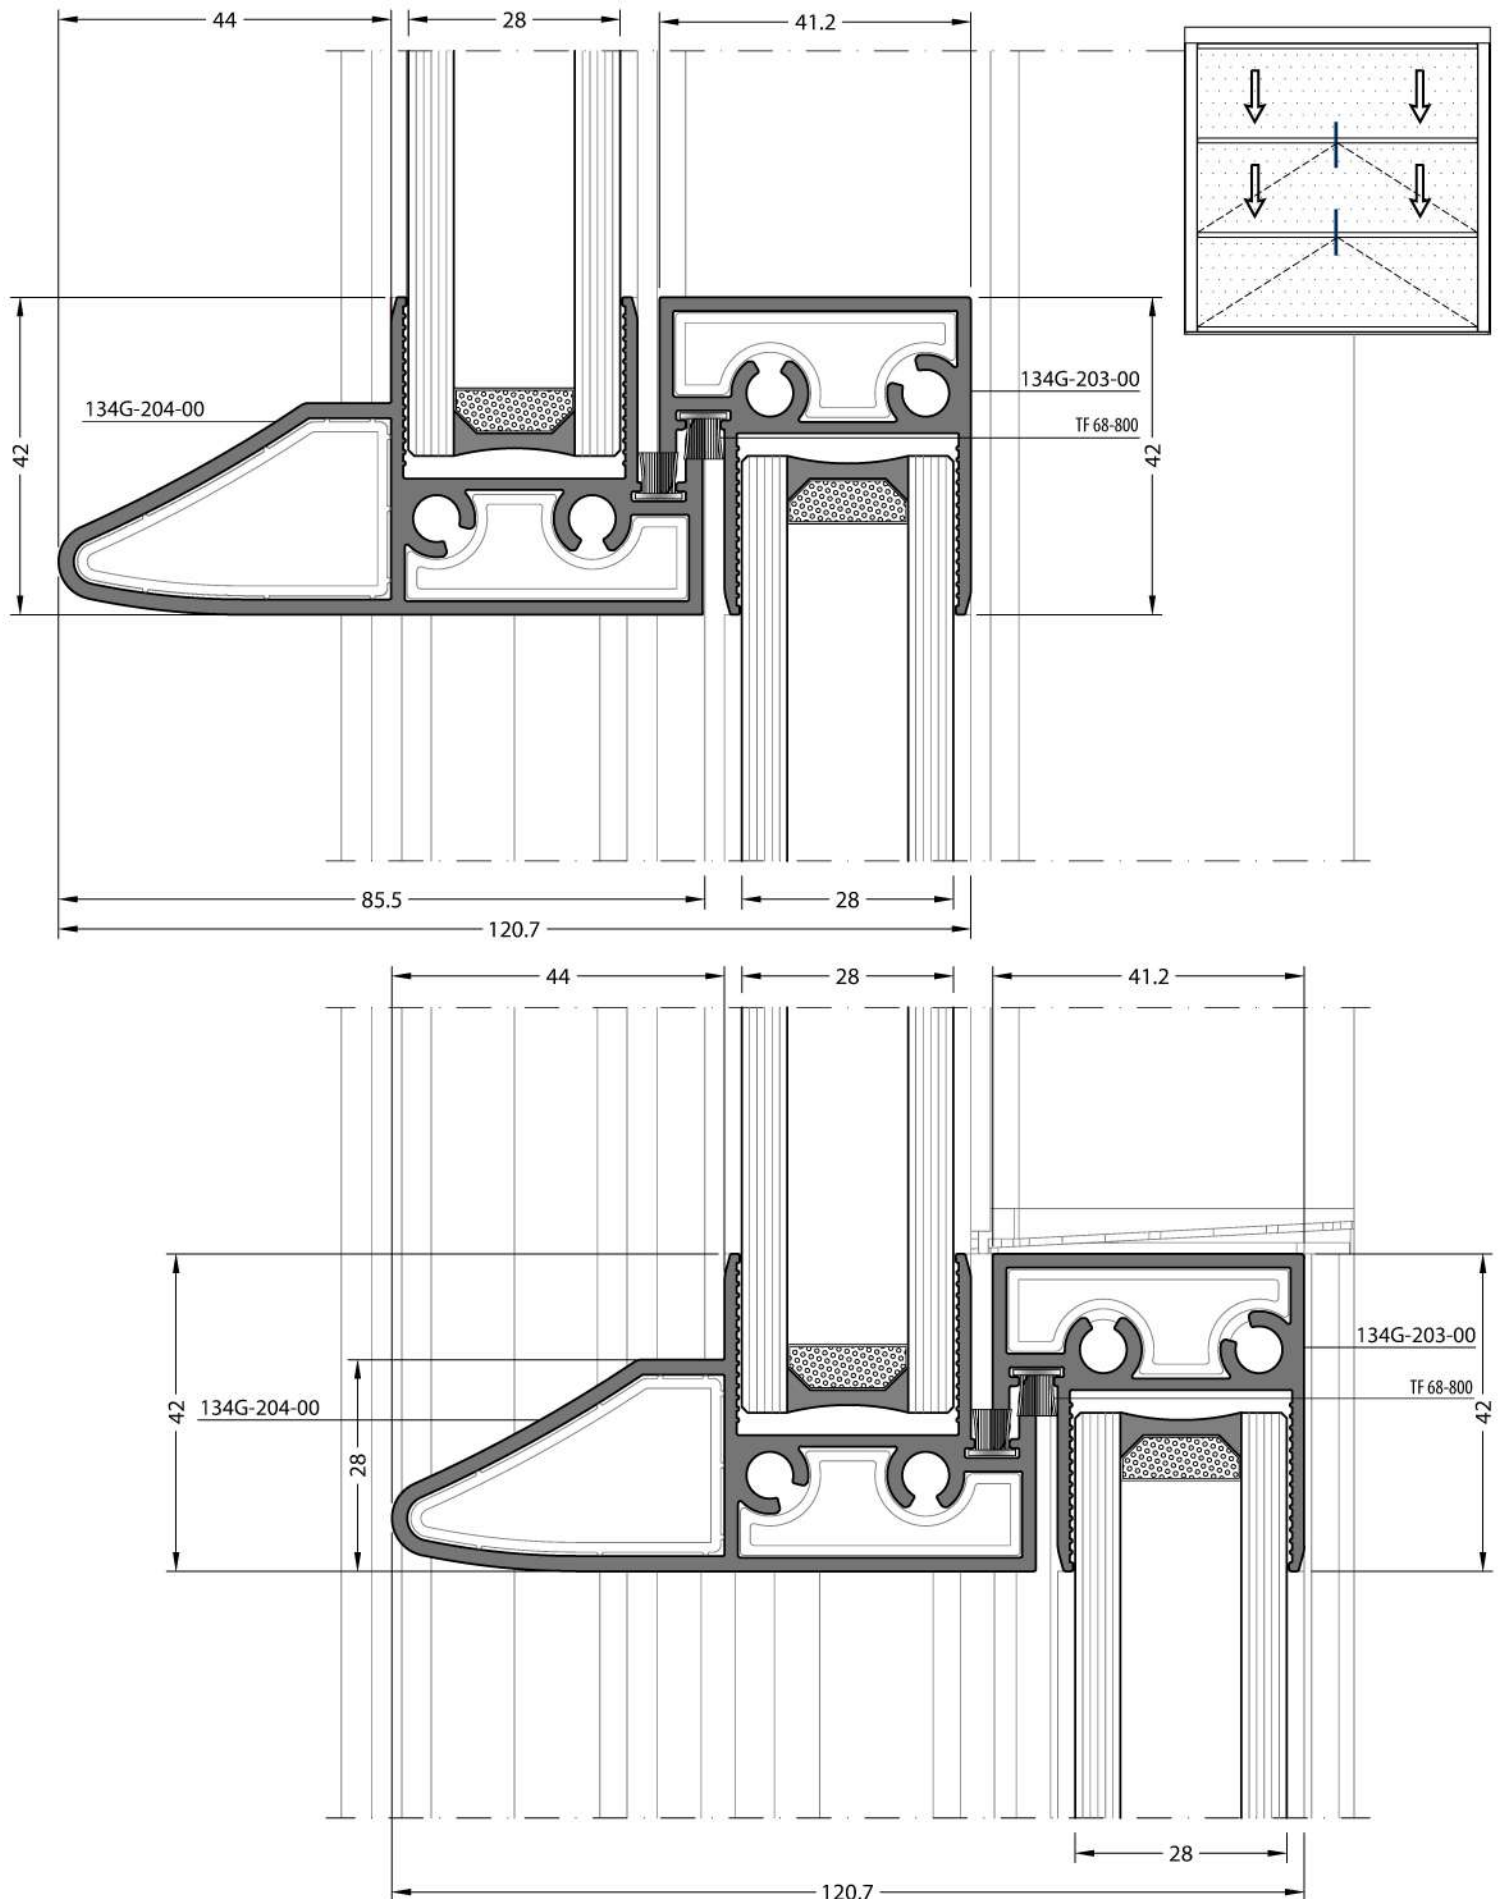


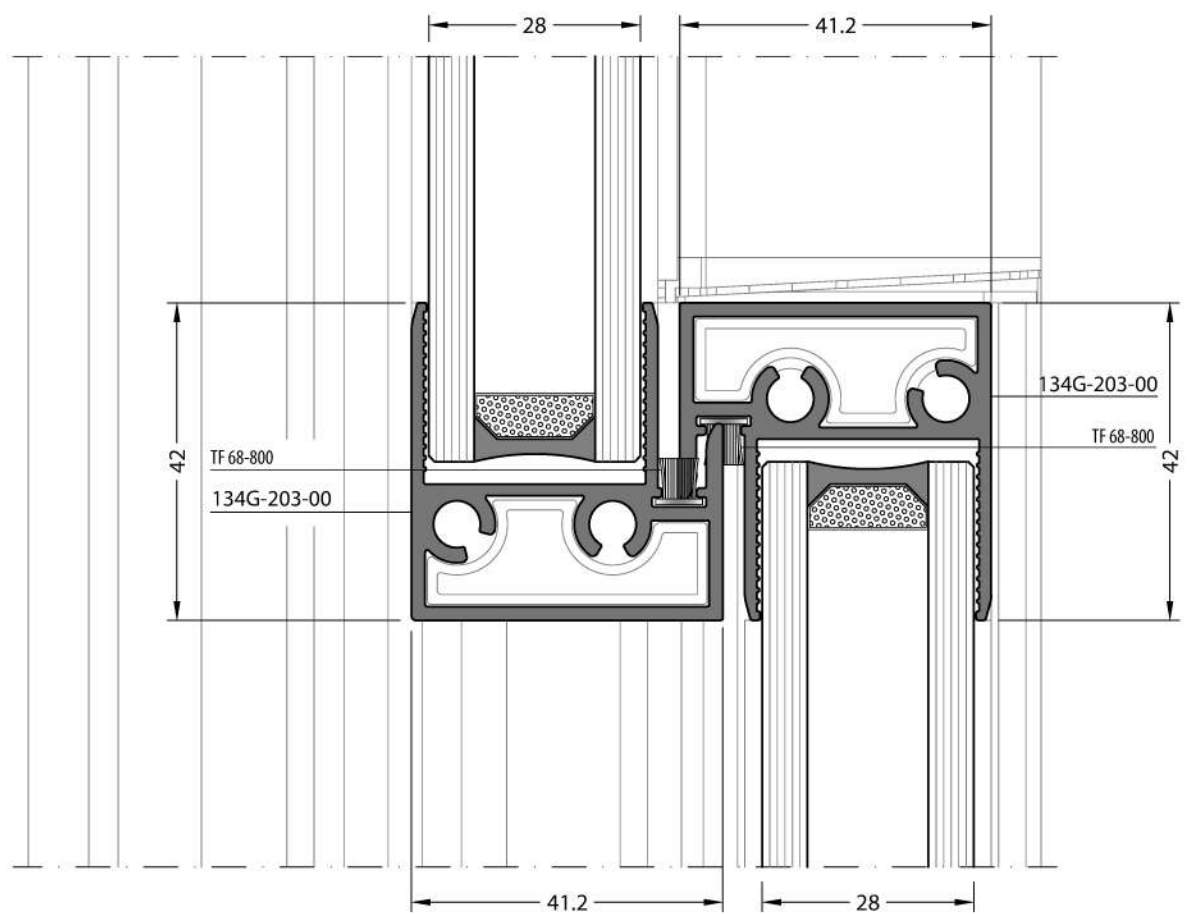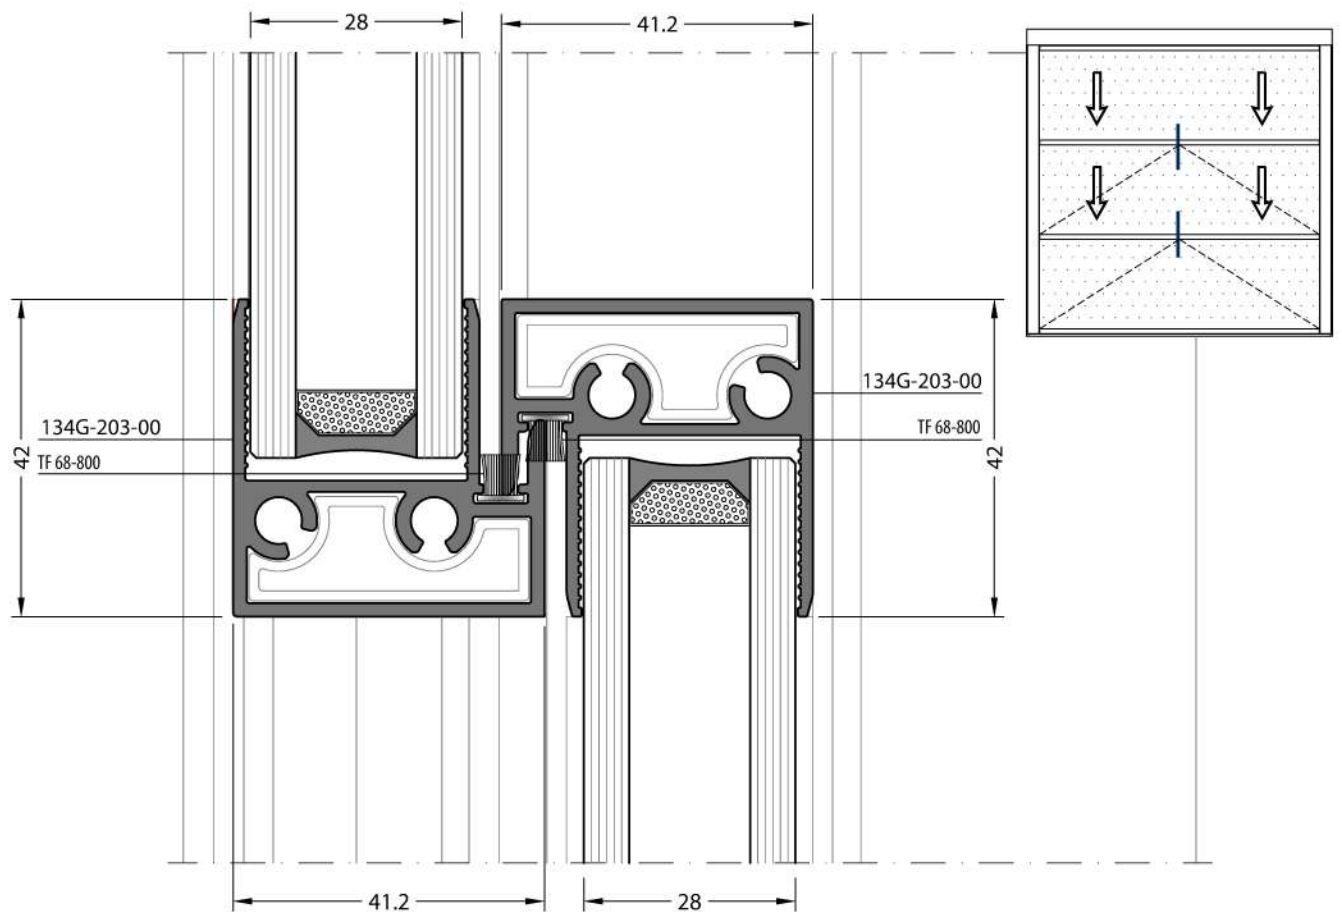

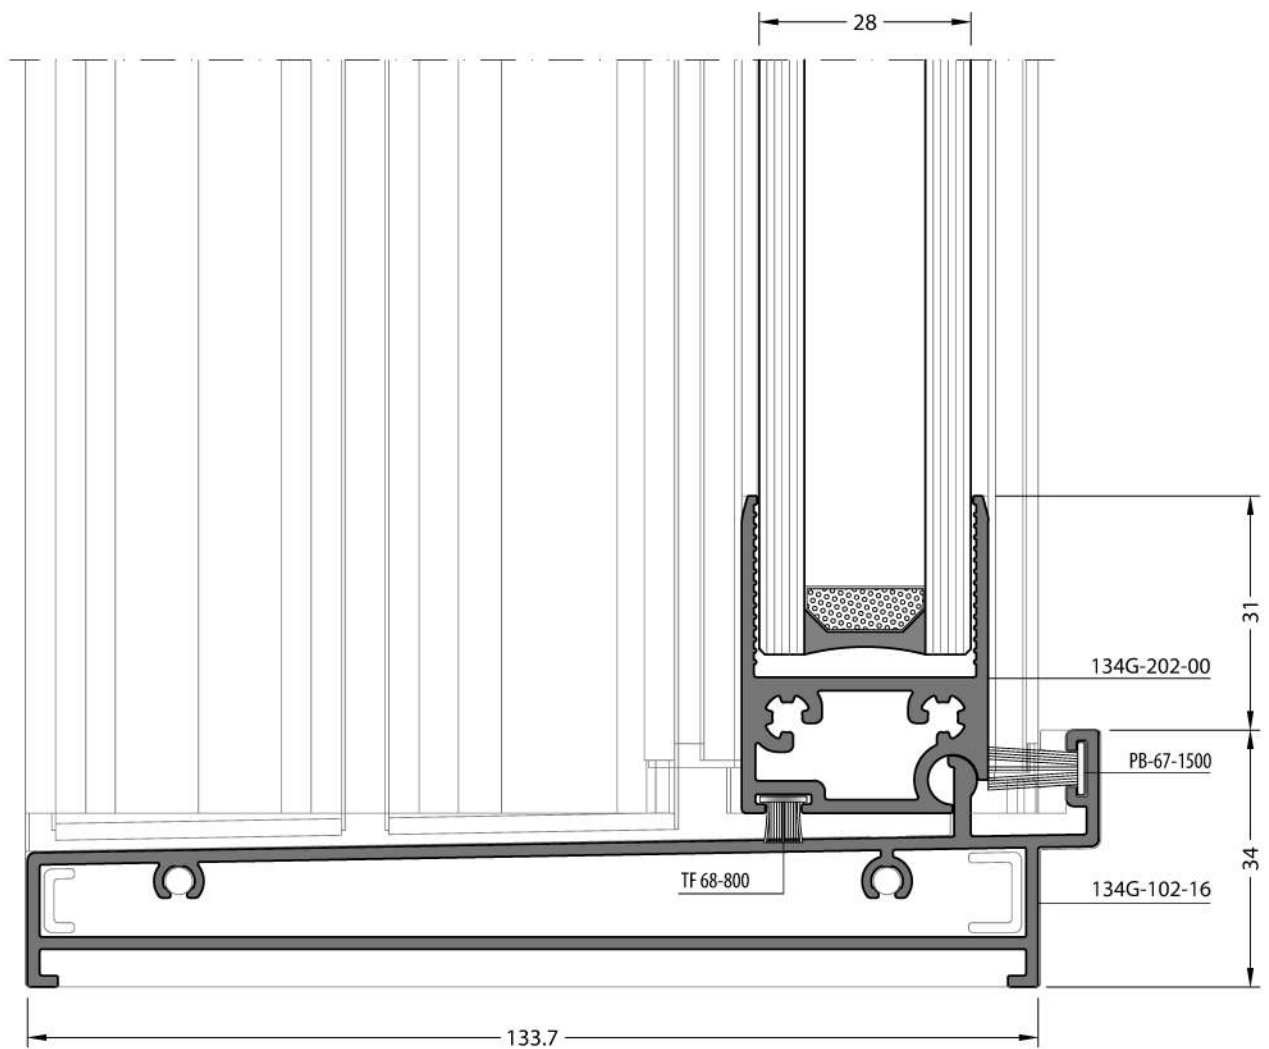
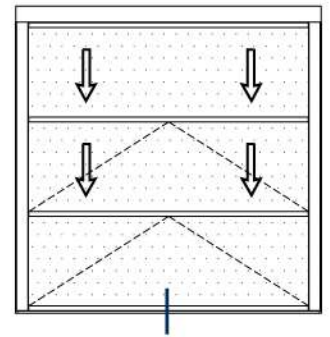


ACCESSORIES
AKSESUARLAR

GASKETS / FITİLLER

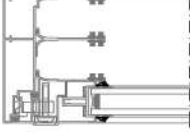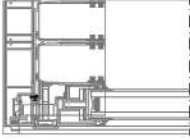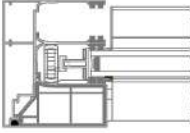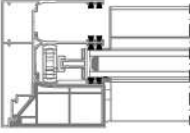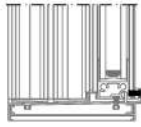CODE / KOD	DRAWING / ÇİZİM	APPLICATION UYGULAMA	DESCRIPTION AÇIKLAMA	MATERIAL MALZEME	WEIGHT AĞIRLIK Kg/m	IN ONE PACKAGE PAKET MİKTARI
EM1-02			GLAZING GASKET CAM FİTİLİ	EPDM	0.040	375 m
EM3-01			ACOUSTICAL GASKET BİNİ FİTİLİ	EPDM	0.032	465 m
EM134G-101			FRAME GASKET KASA FİTİLİ	TPE	0.020	500 m
EM134G-401			BOX GASKET KUTU FİTİLİ	EPDM	0.090	150 m
TF 68-800			SASH BRUSH KANAT FIRÇA (8 mm)	-	-	500 m
PB-67-1200			TOP HORIZONTAL FRAME BRUSH ÜST YATAY KASA FIRÇASI (12 mm)	-	-	200 m
PB-67-1500			BOTTOM HORIZONTAL FRAME BRUSH ALT YATAY KASA FIRÇASI (15 mm)	-	-	200 m

ACCESSORIES / AKSESUARLAR

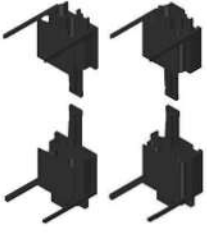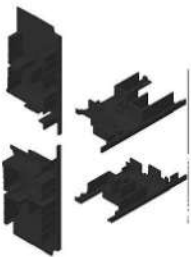PACKAGE CODE PAKET KODU	PICTURE / RESİM	DESCRIPTION AÇIKLAMA	PACKAGE CODE PAKET KODU	PICTURE / RESİM	DESCRIPTION AÇIKLAMA
AC134G-102		FRAME CORNER CAP SET KASA ALT KÖŞE KAPAK TAKIMI	AC134G-403		HAND PROTECT PROFILE CAP SET EL KORUMU PROFİL KAPAK TAKIMI
AC134G-106		FIXED ADAPTER CAP SET SABİT ADAPTÖR KAPAK TAKIMI	AC134G-401		BOX SIDE ANCHOR KUTU YAN ANKRAJ
AC134G-202		SASH CORNER PLASTIC SET KANAT KÖŞE PLASTİK TAKIMI	AC134G-11		PULLEY RULMAN
AC134G-203		SASH CLAMP CORNER PLASTIC SET KANAT KENET KÖŞE PLASTİK TAKIMI	AC150BC-581		TUBULAR MOTOR WITH RECIEVER ALICILI TÜP MOTOR
AC134G-204		CLAMP SUPPORT PLASTIC SET KENET TAKVİYE PLASTİK TAKIMI	AC150BC-583		OCTAGONAL TUBE SEKİZGEN BORU
AC134G-211		MOVEABLE SASH TOP CAP SET HAREKETLİ KANAT ÜST KAPAK TAKIMI	AC150BC-584		TUBE HEAD BORU BAŞI

ACCESSORIES / AKSESUARLAR

PACKAGE CODE PAKET KODU	PICTURE / RESİM	DESCRIPTION AÇIKLAMA
AC134G-584		BELT PULLEY KAYIŞ KASNAK
AC134G-585		F2 FLAT BELT F2 DÜZ KAYIŞ (20 mm)
AC134G-588		CHAIN WEIGHT ZİNCİR AĞIRLIĞI
032.13.5000		HANDLE KOL
032.13.5001		STAINLESS LIMITER SCISSOR PASLANMAZ SINIRLAYICI MAKAS


PACKAGE CODE PAKET KODU	PICTURE / RESİM	DESCRIPTION AÇIKLAMA
032.13.5002		ESPAGNOLETTE İSPANYOLET
004.10.0329		STRIKER KARŞILIK
AC134G-501		BELT MONTAGE ITEM KAYIŞ BAĞLAMA APARATI
1011		GLASS WEDGE CAM TAKOZU

The background is a solid dark blue color. It features several large, overlapping, semi-transparent geometric shapes in a lighter shade of blue. These shapes include a large triangle on the right side, a curved shape below it, and a diagonal band crossing the lower half of the page. The overall effect is modern and architectural.

ASSEMBLY DETAILS

MONTAJ DETAYLARI



A DETAIL / DETAYI

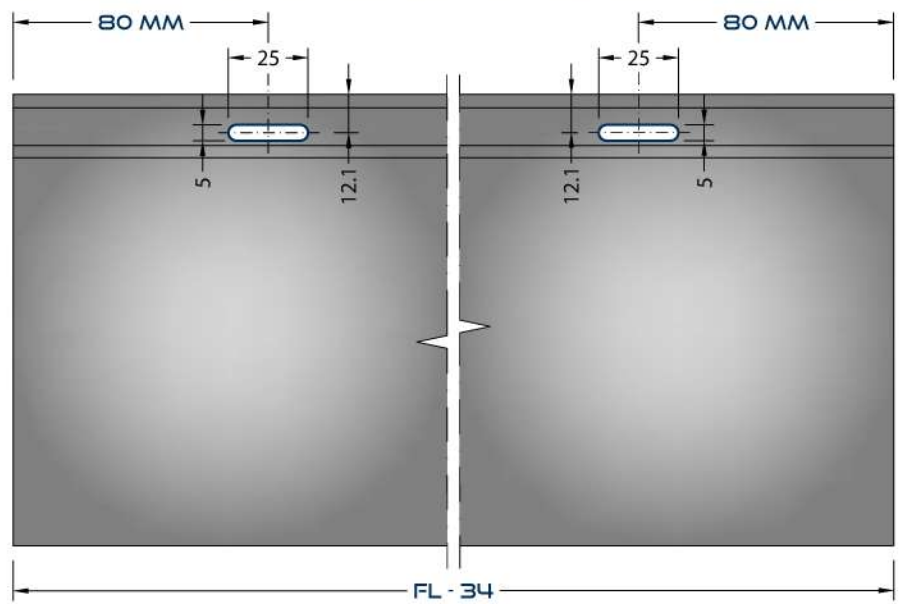



134G-102-16

9.6


6x22 Slot

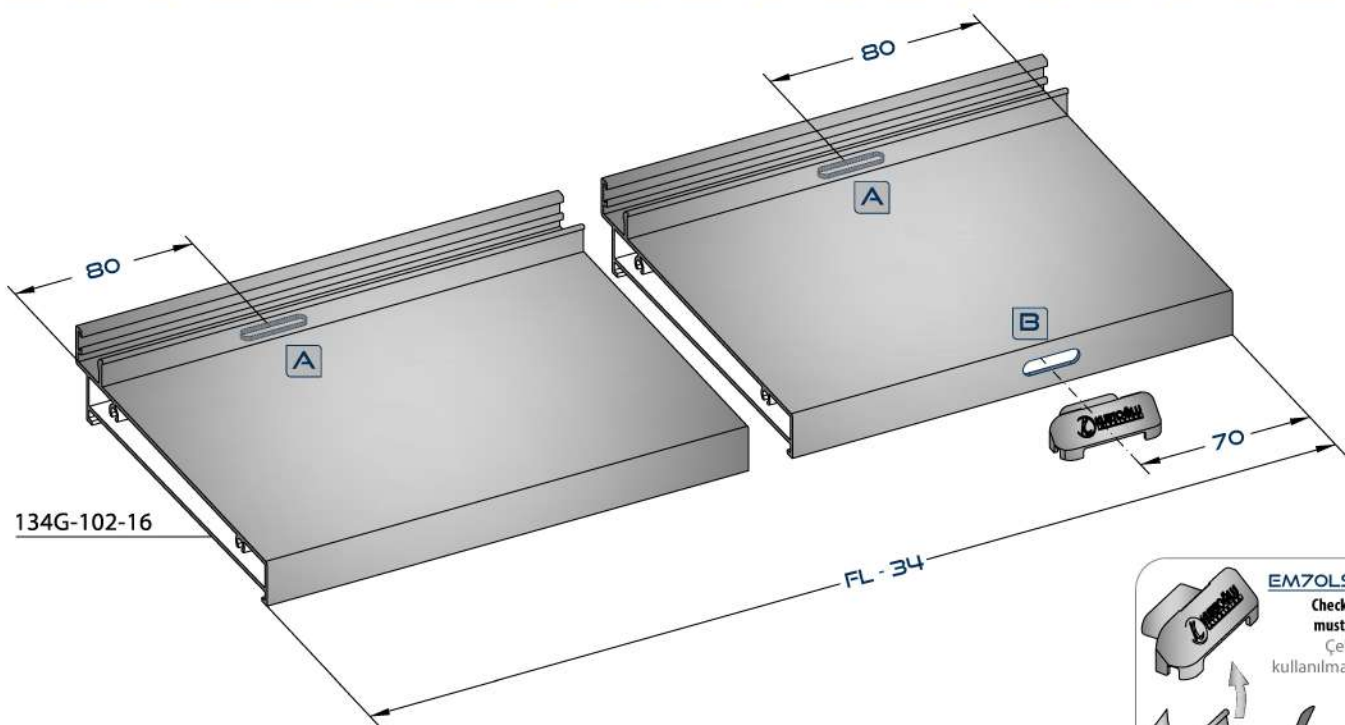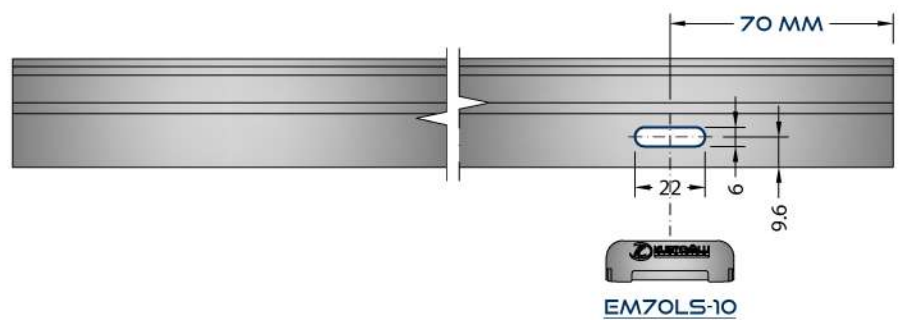



**FRAME BOX NOTCH
KASA KUTU KERTME**

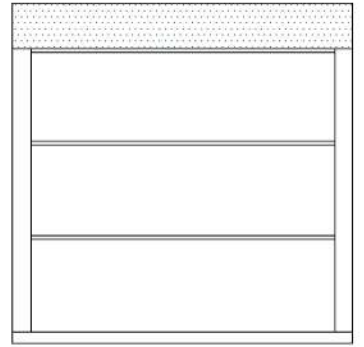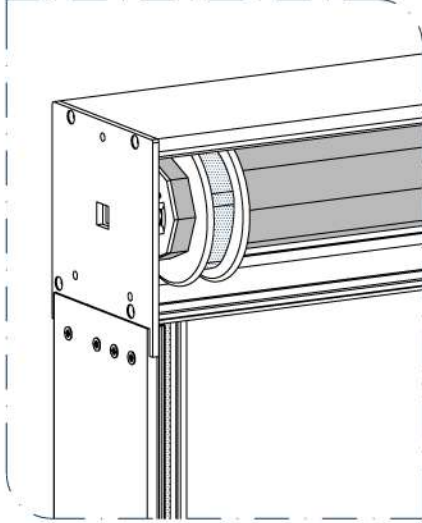


134G-401-25

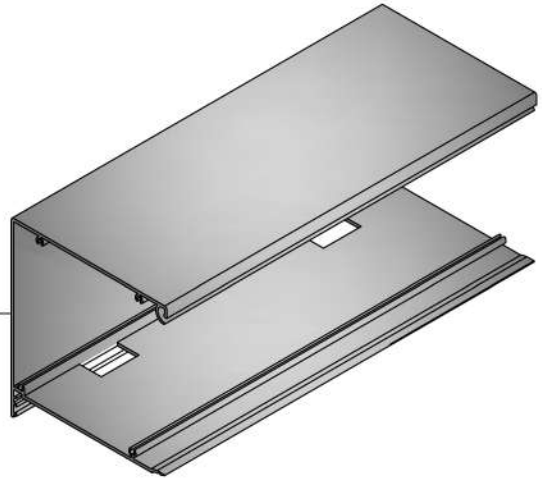

**WITH F2 FLAT BELT
F2 DÜZ KAYIŞLI**

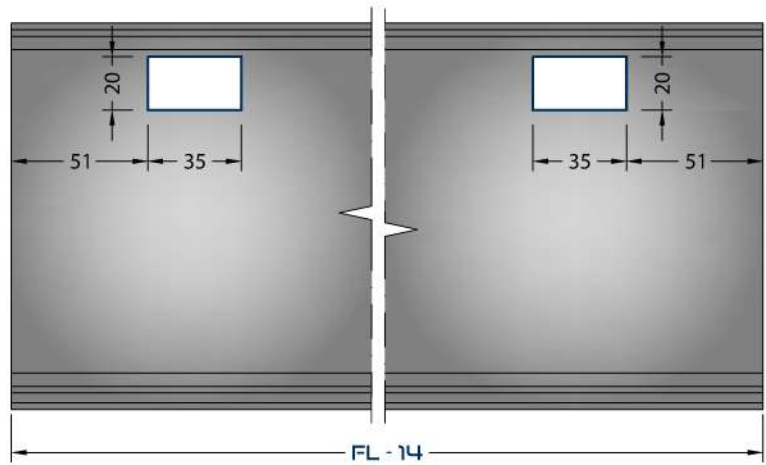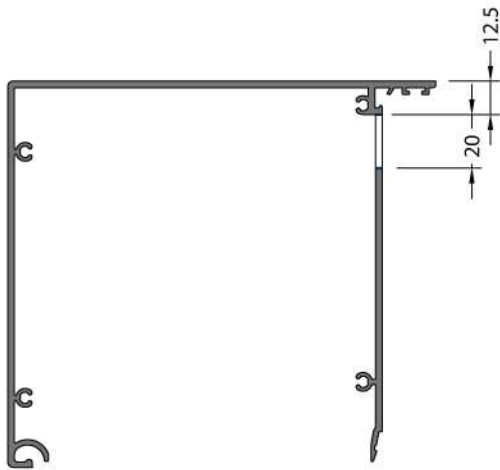


**FRAME ASSEMBLY
KASA MONTAJ**

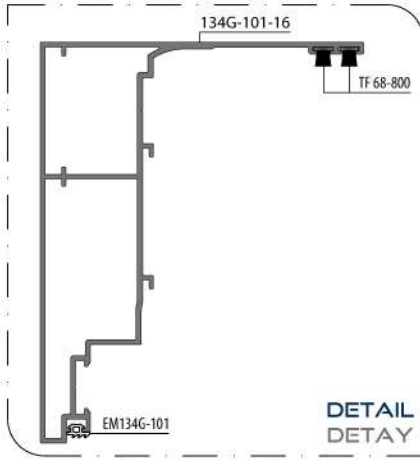

**AC134G-401
BOX SIDE ANCHOR
KUTU YAN ANKRAJ**

**AC134G-102
FRAME CORNER
CAP SET
KASA ALT KÖŞE
KAPAK TAKIMI**

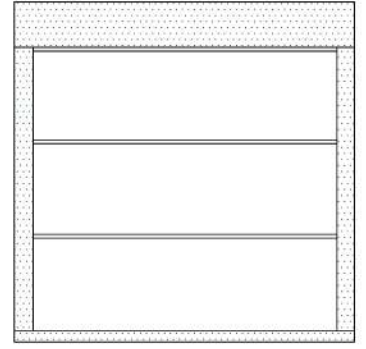

134G-401-25

**YHB 4.8x13
DIN 7982
AC134G-401**

**PB-67-1200
EM134G-401**

FL - 14

FL - 14

**134G-402-18
TF 68-800**

134G-101-16

TF 68-800

EM134G-101

FH - 163

134G-101-16

**AC134G-102
(AC134G-102B)
YSB 4.8x32
DIN 7981**

FL - 34




134G-102-16

PB-67-1500


**YSB 4.8x32
DIN 7981**

**AC134G-102
(AC134G-102A)**



TUBULER MOTOR MONTAGE
TUP MOTOR MONTAJI

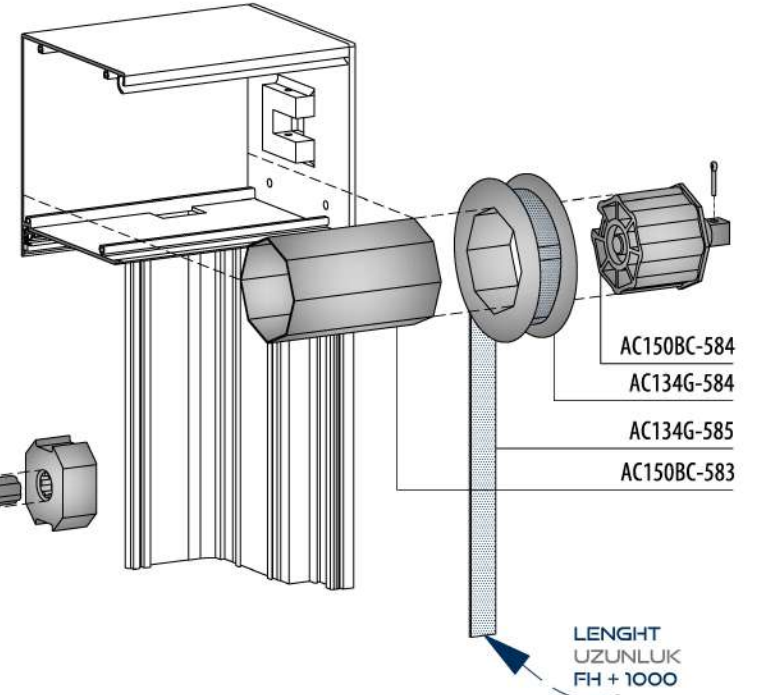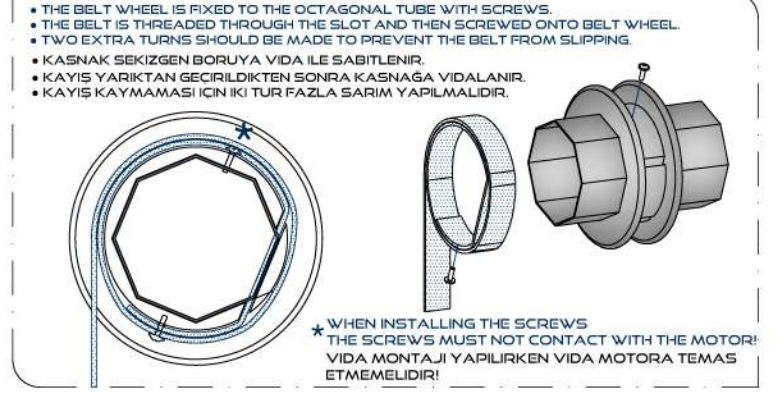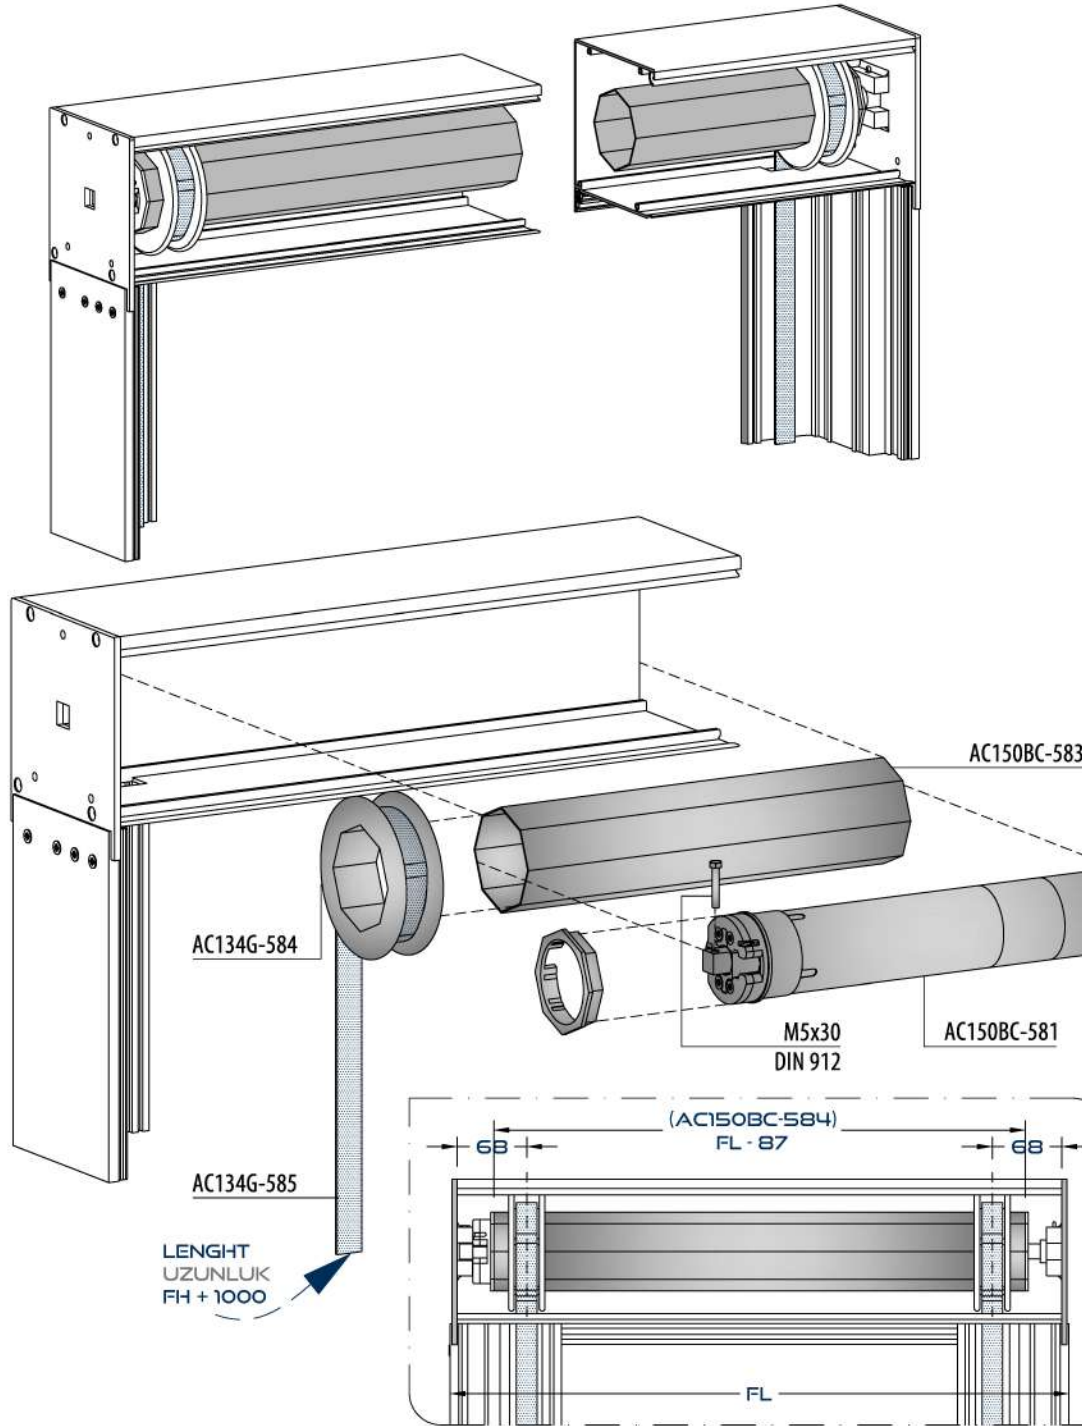

**GLASS WEDGE
CAM TAKOZU**

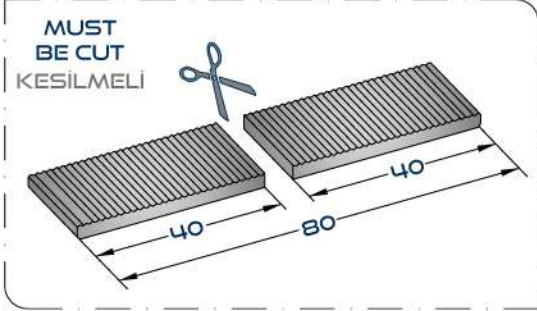


**1011
GLASS WEDGE
CAM TAKOZU**

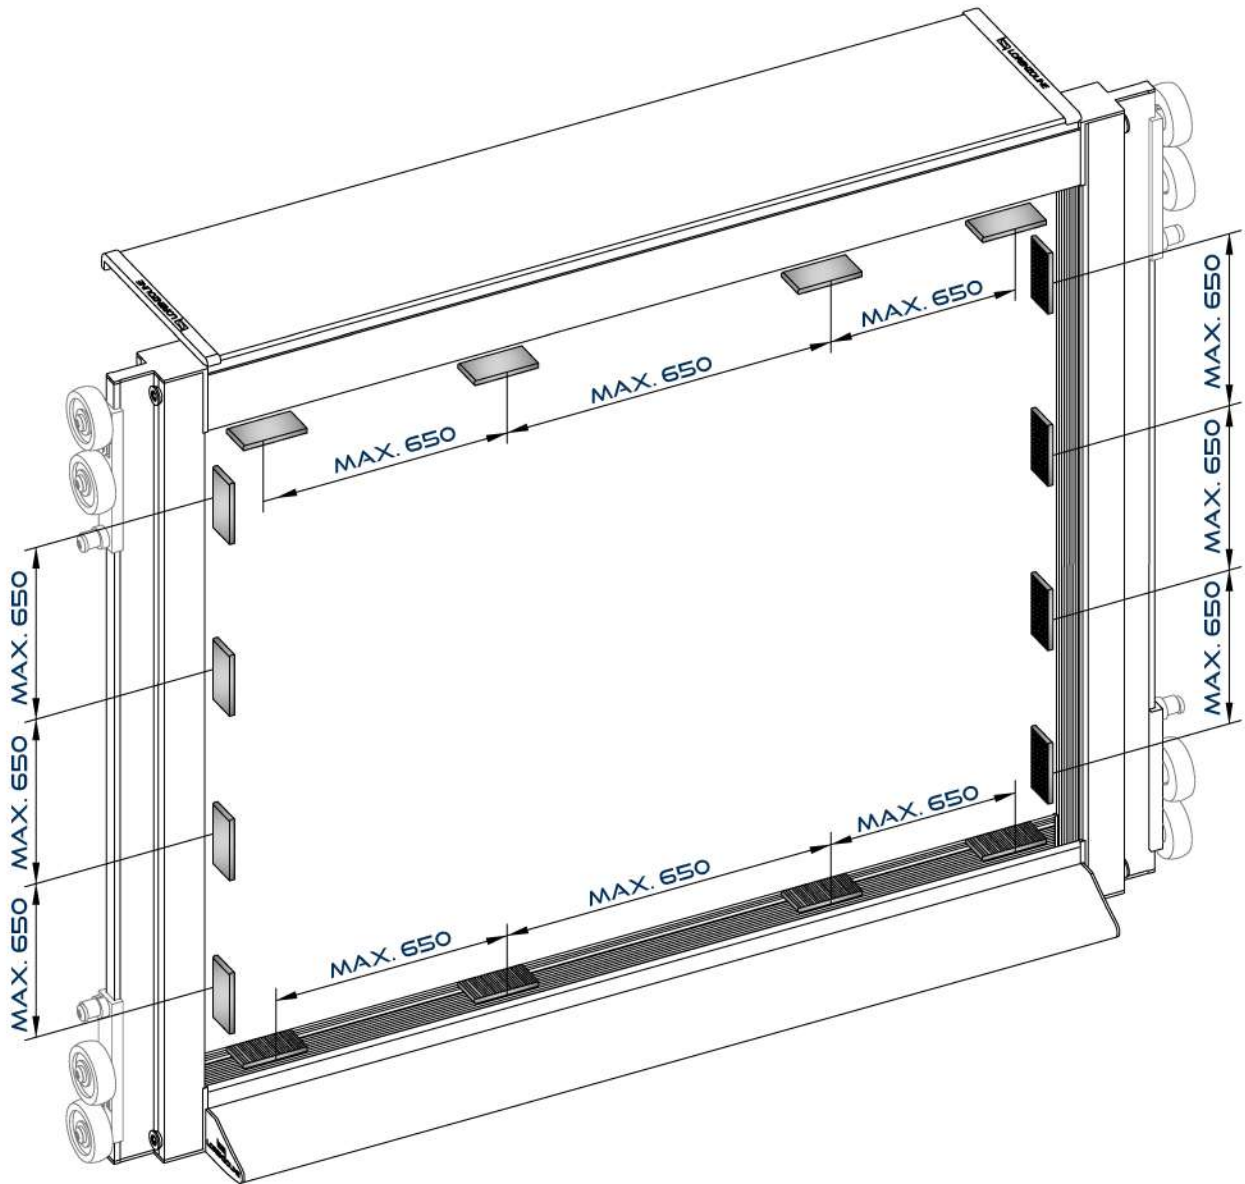
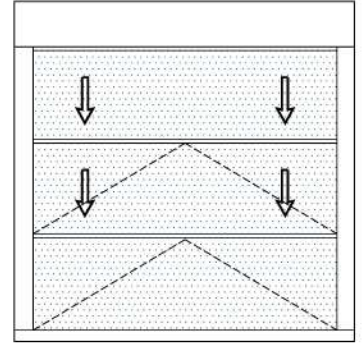


2 MM GLASS SPACERS MUST BE USED FOR THE GLASS INSTALLATION FOR ALL SASHES
TÜM KANATLARIN CAM MONTAJINDA 2MM CAM TAKOZU KULLANILAMALIDIR.

**TOP SASH ASSEMBLY
ÜST KANAT MONTAJ**

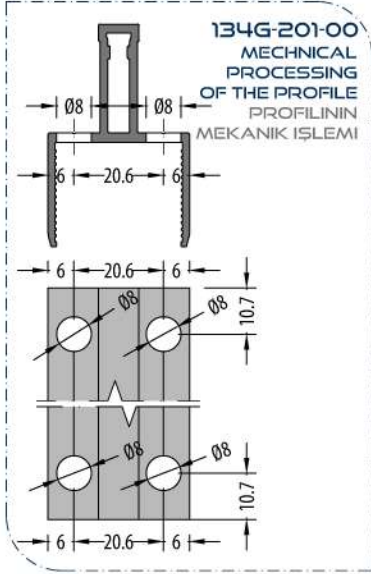

**A DETAIL / A DETAYI
134G-202-00**

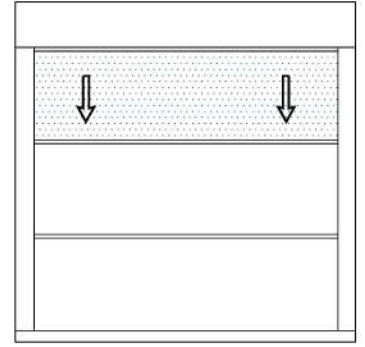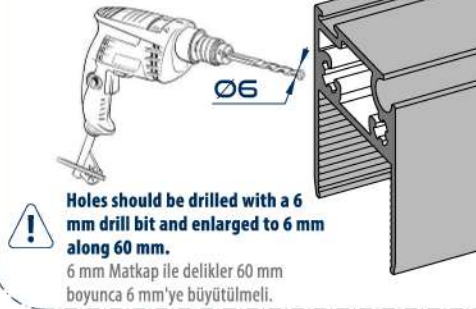

AC134G-403
(AC134G-403A)

AC134G-202
(AC134G-202A)

134G-201-00

AC134G-11
YSB 4.8x32
DIN 7981

AC134G-403
(AC134G-403B)

AC134G-202
(AC134G-202B)

134G-203-00 WHEN USED / KULLANILDIĞINDA

134G-204-00 WHEN USED / KULLANILDIĞINDA

**CUTTING SIZE
KESİM ÖLÇÜSÜ**

((FH - 52) / 3) - 45

80 mm

80 mm

AC134G-203
(AC134G-203A)
Buldex 7.5x80

AC134G-203
(AC134G-203B)

AC134G-204
(AC134G-204B)




**ALTERNATIVE
ALTERNATİF**

**ALL PLASTIC AND ALUMINIUM PROFILE JOINTS MUST BE INSULATED WITH SILICONE.
BÜTÜN PLASTİK VE ALÜMİNYUM PROFİL BİRLEŞİMLERİ SİLİKON İLE İZOLE EDİLMELİDİR.**



**THE GLASS MUST BE GLUED BY APPLYING POLYURETHANE (50 SHORE A) ADHESIVE TO ALL EDGES OF THE GLASS
BÜTÜN CAM KENARLARINDA POLİURETAN (50 SHORE A) YAPIŞTIRICISI UYGULANARAK, CAMIN YAPIŞTIRILMASI GEREKMEKTEDİR.**

MIDDLE SASH ASSEMBLY
ORTA KANAT MONTAJ



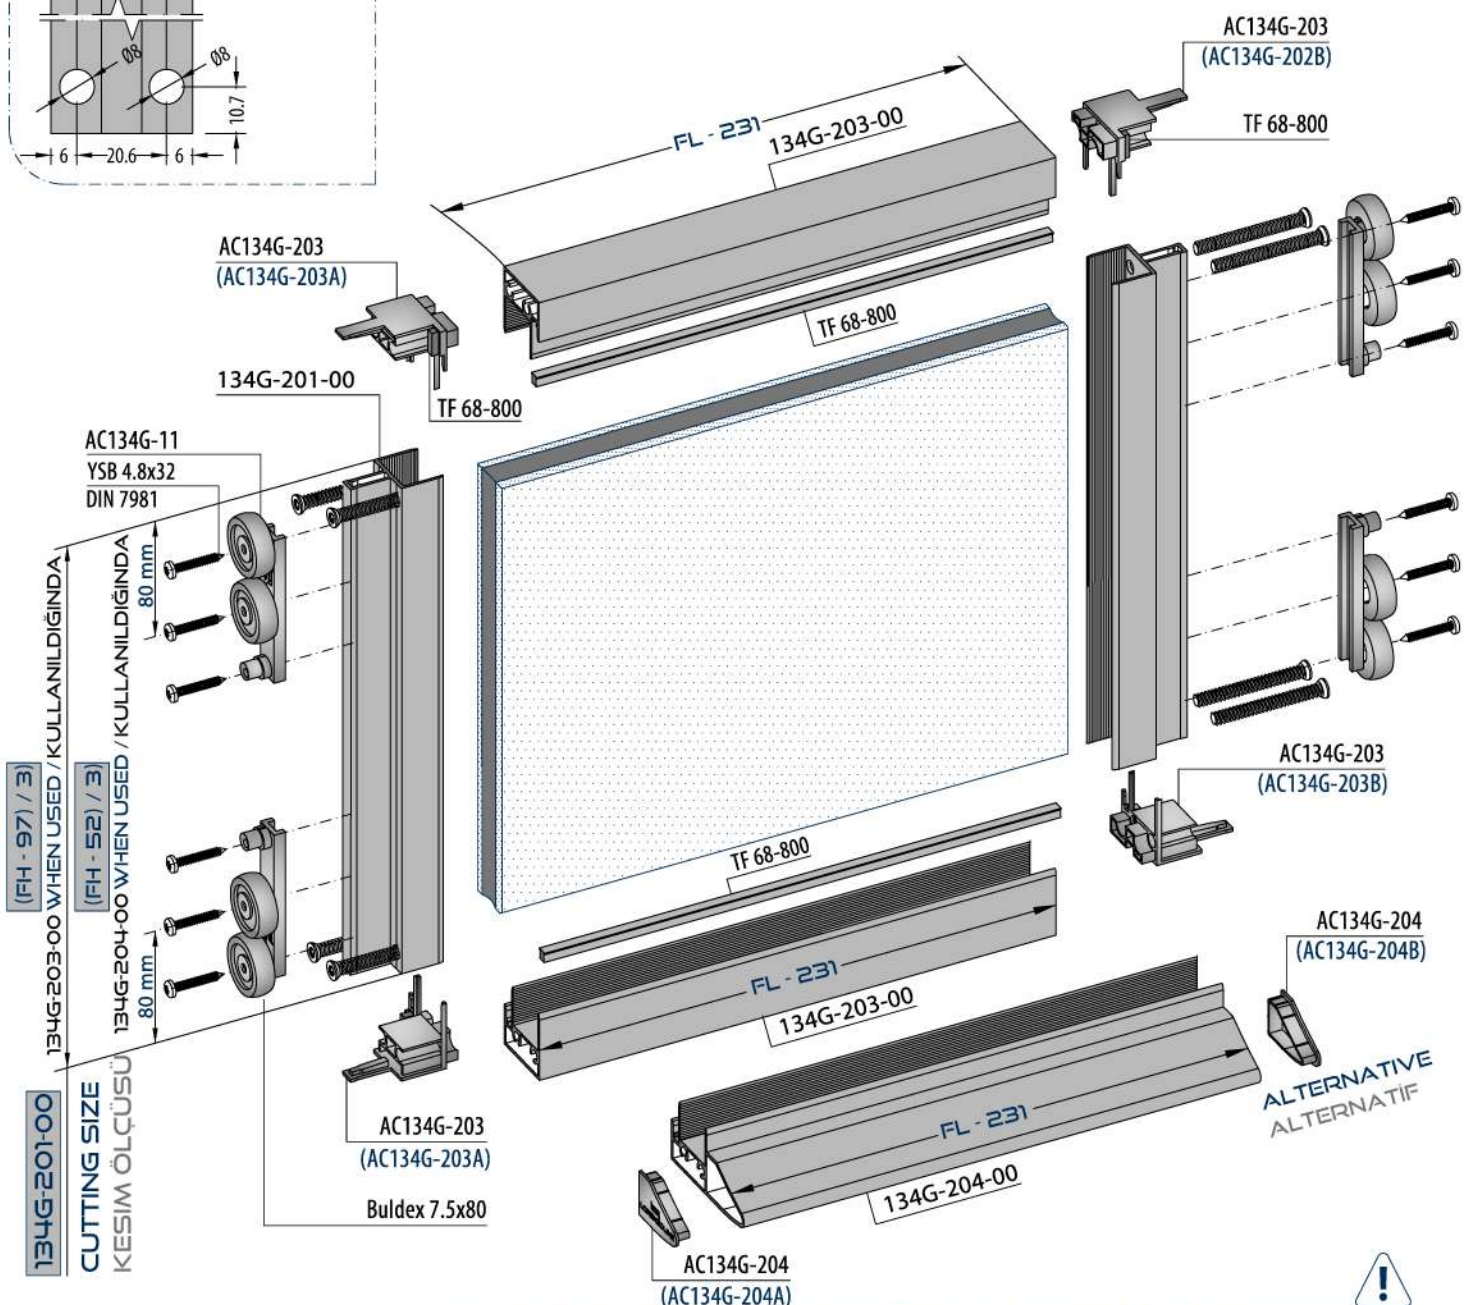
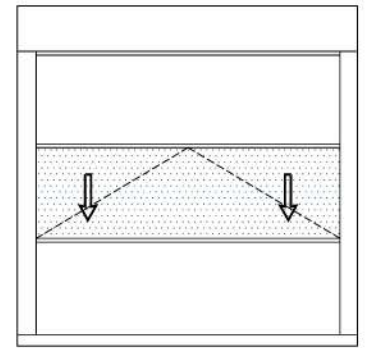
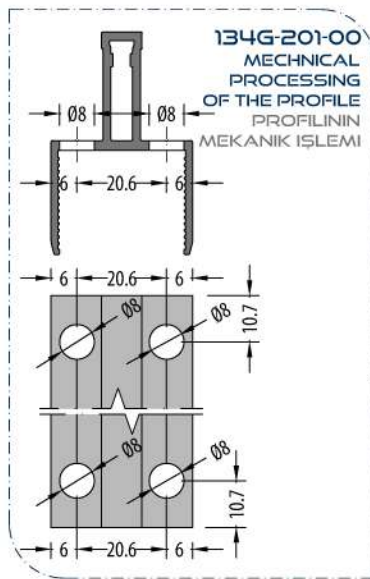


ALL PLASTIC AND ALUMINIUM PROFILE JOINTS MUST BE INSULATED WITH SILICONE.
BÜTÜN PLASTİK VE ALÜMİNYUM PROFİL BİRLEŞİMLERİ SİLİKON İLE İZOLE EDİLMELİDİR.

 THE GLASS MUST BE GLUED BY APPLYING POLYURETHANE (50 SHORE A)
ADHESIVE TO ALL EDGES OF THE GLASS

BÜTÜN CAM KENARLARINDA POLİURETAN (50 SHORE A) YAPIŞTIRICISI UYGULANARAK, CAMIN
YAPISTIRILMASI GEREKMEKTEDİR.





**BOTTOM SASH ASSEMBLY
ALT KANAT MONTAJ**

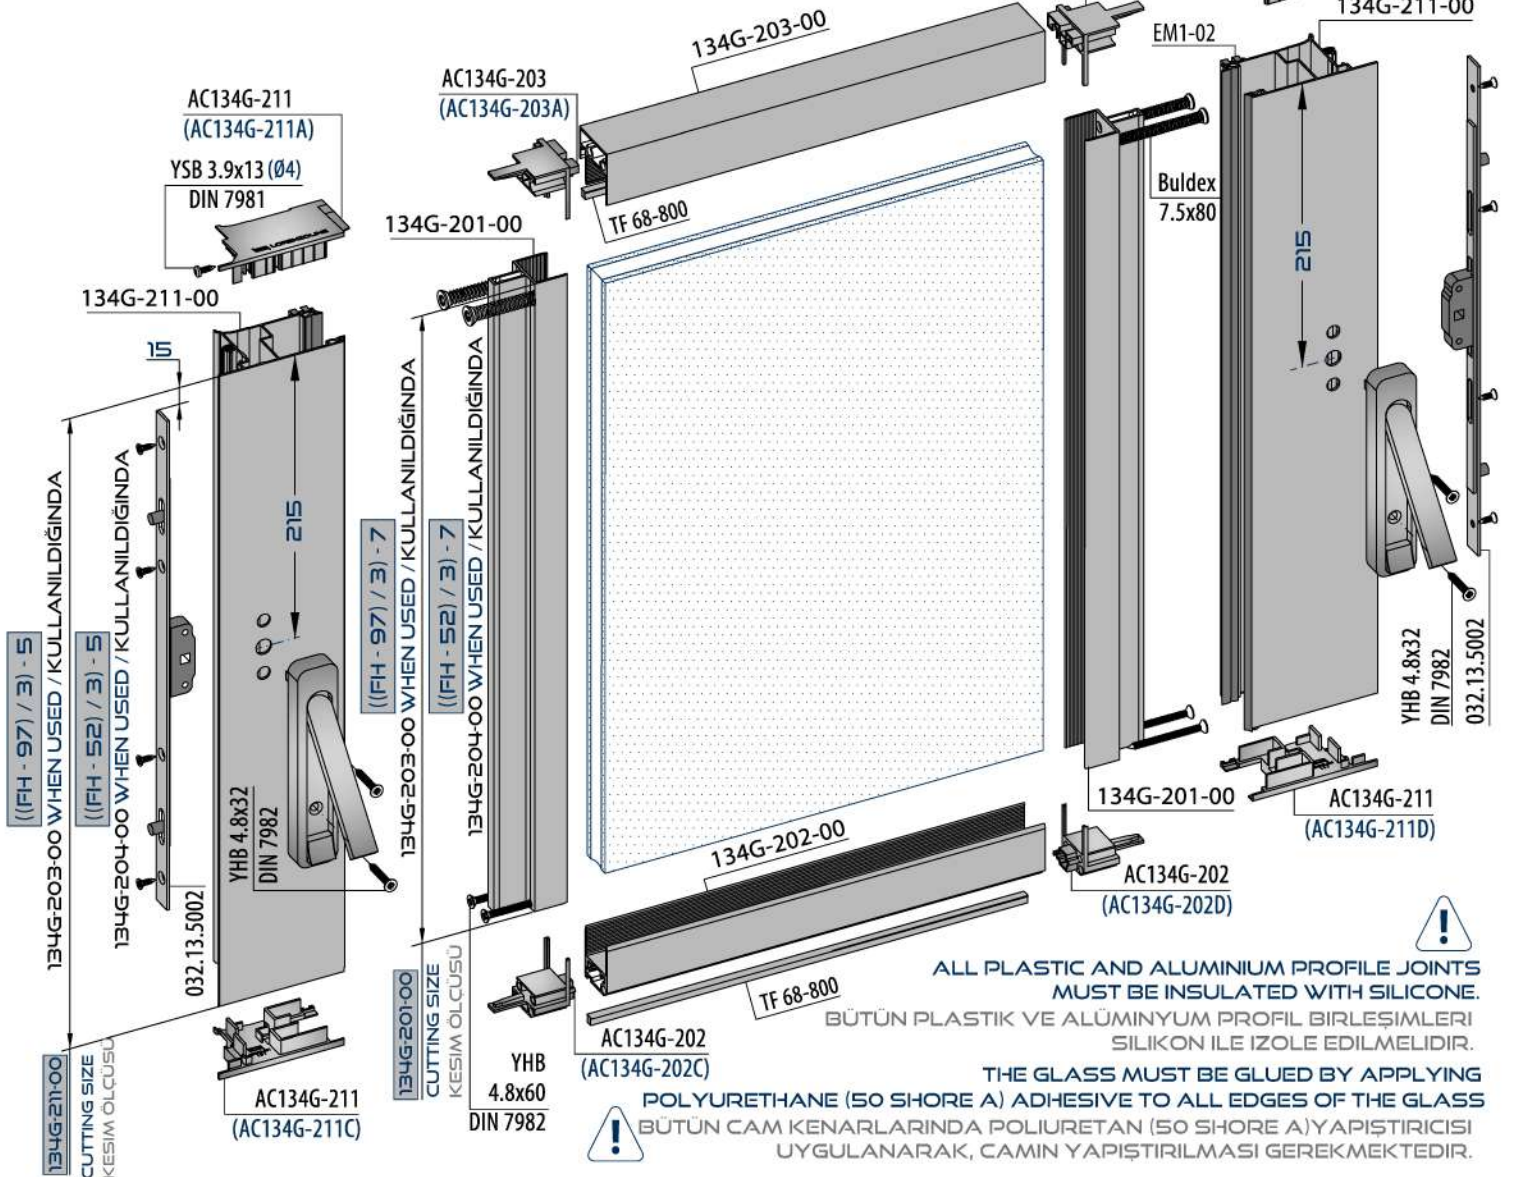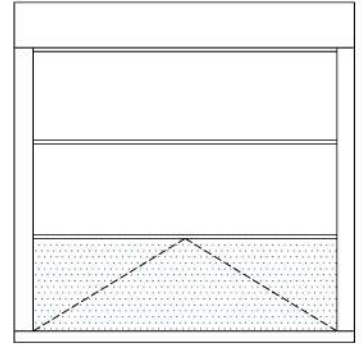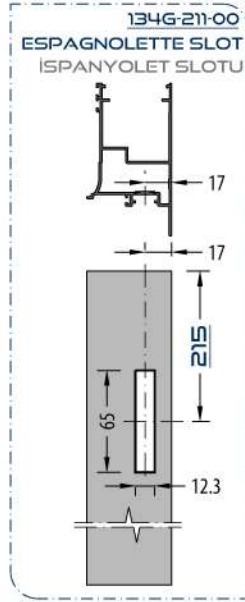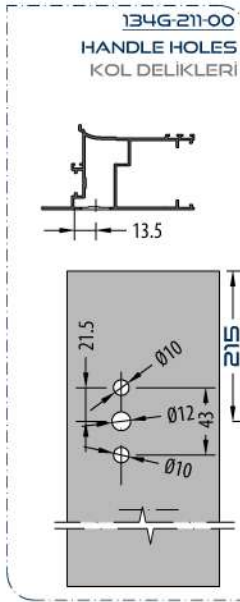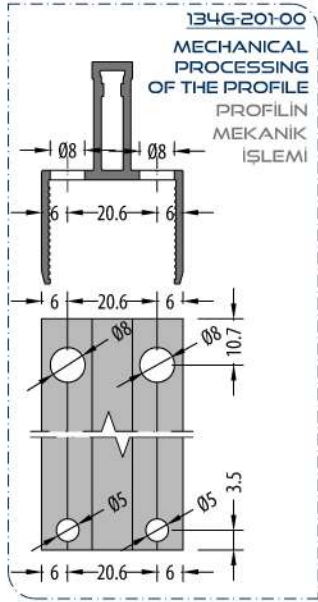

ALL PLASTIC AND ALUMINIUM PROFILE JOINTS
MUST BE INSULATED WITH SILICONE.
BÜTÜN PLASTİK VE ALÜMİNYUM PROFİL BİRLEŞİMLERİ
SİLİKON İLE İZOLE EDİLMELİDİR.


THE GLASS MUST BE GLUED BY APPLYING
POLYURETHANE (50 SHORE A) ADHESIVE TO ALL EDGES OF THE GLASS
BÜTÜN CAM KENARLARINDA POLİURETAN (50 SHORE A) YAPIŞTIRICISI
UYGULANARAK, CAMIN YAPIŞTIRILMASI GEREKMEKTEDİR.

**TOP SASH INSTALL
ÜST KANADIN YERINE MONTAJI**

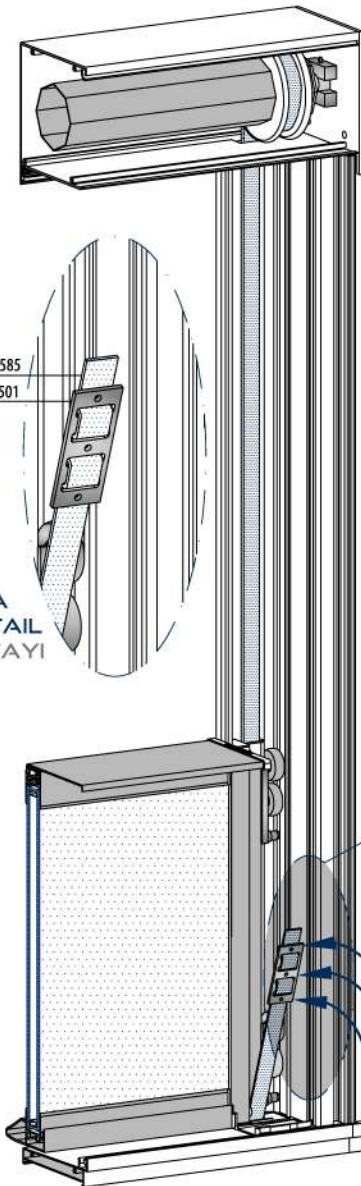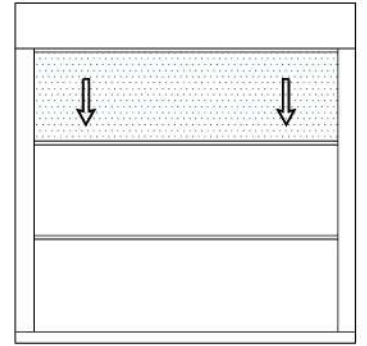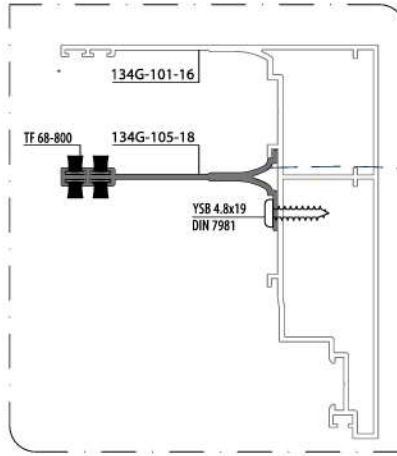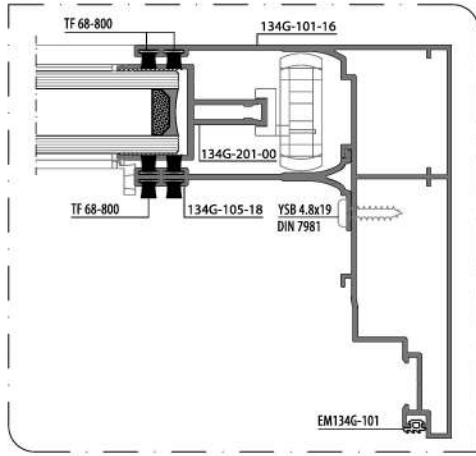

AC134G-585
AC134G-501


**A
DETAIL
DETAYI**

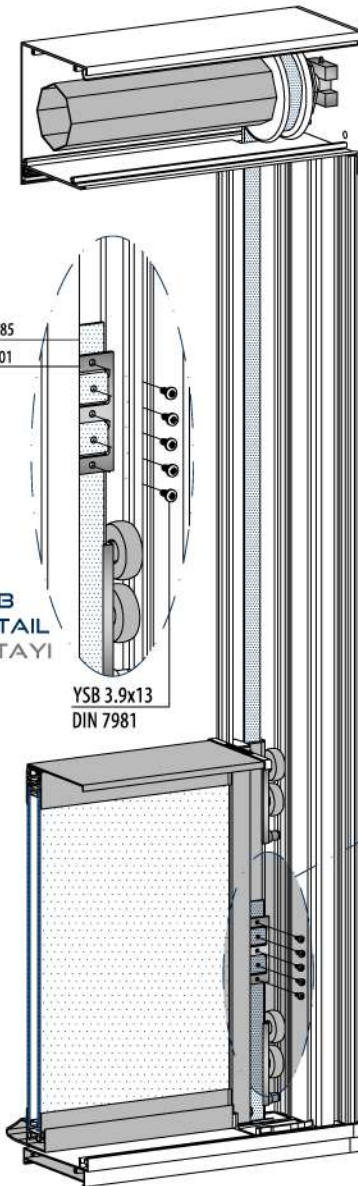

AC134G-585
AC134G-501

**B
DETAIL
DETAYI**

YSB 3.9x13
DIN 7981

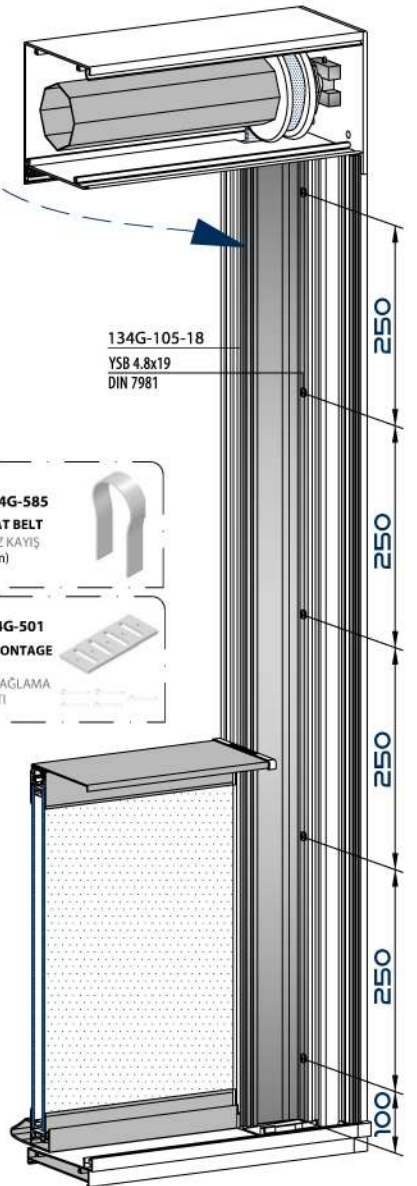

134G-105-18
YSB 4.8x19
DIN 7981

**AC134G-585
F2 FLAT BELT
F2 DÜZ KAYIŞ
(20 mm)**


**AC134G-501
BELT MONTAGE
ITEM
KAYIŞ BAĞLAMA
APARATI**

PUT THE FIRST SASH ON THE
PLACE AND ROTATE THE BELT
UNDERNEATH THE SASH.
İLK KANADI YERINE KOYUN.
ALTINDAN TRİGERİ GEÇİRİN.



MONTAGE THE F2 FLAT BELT
ADAPTOR BY SCREWS.
KAYIŞ PARATINI VIDALAYIN.

134G-105-18 MONTAGE
THE PROFILE
134G-105-18 NOLU PROFİLİ
YERİNE MONTE EDİN.

**MIDDLE SASH INSTALL
ORTA KANADIN YERINE MONTAJI**

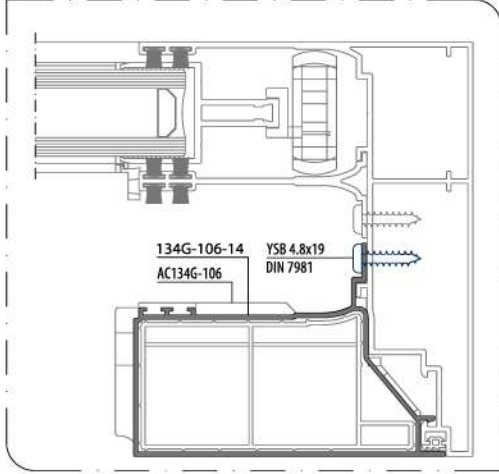

**AC134G-106
FIXED ADAPTER
CAP SET
SABİT ADAPTÖR
KAPAK TAKIMI**

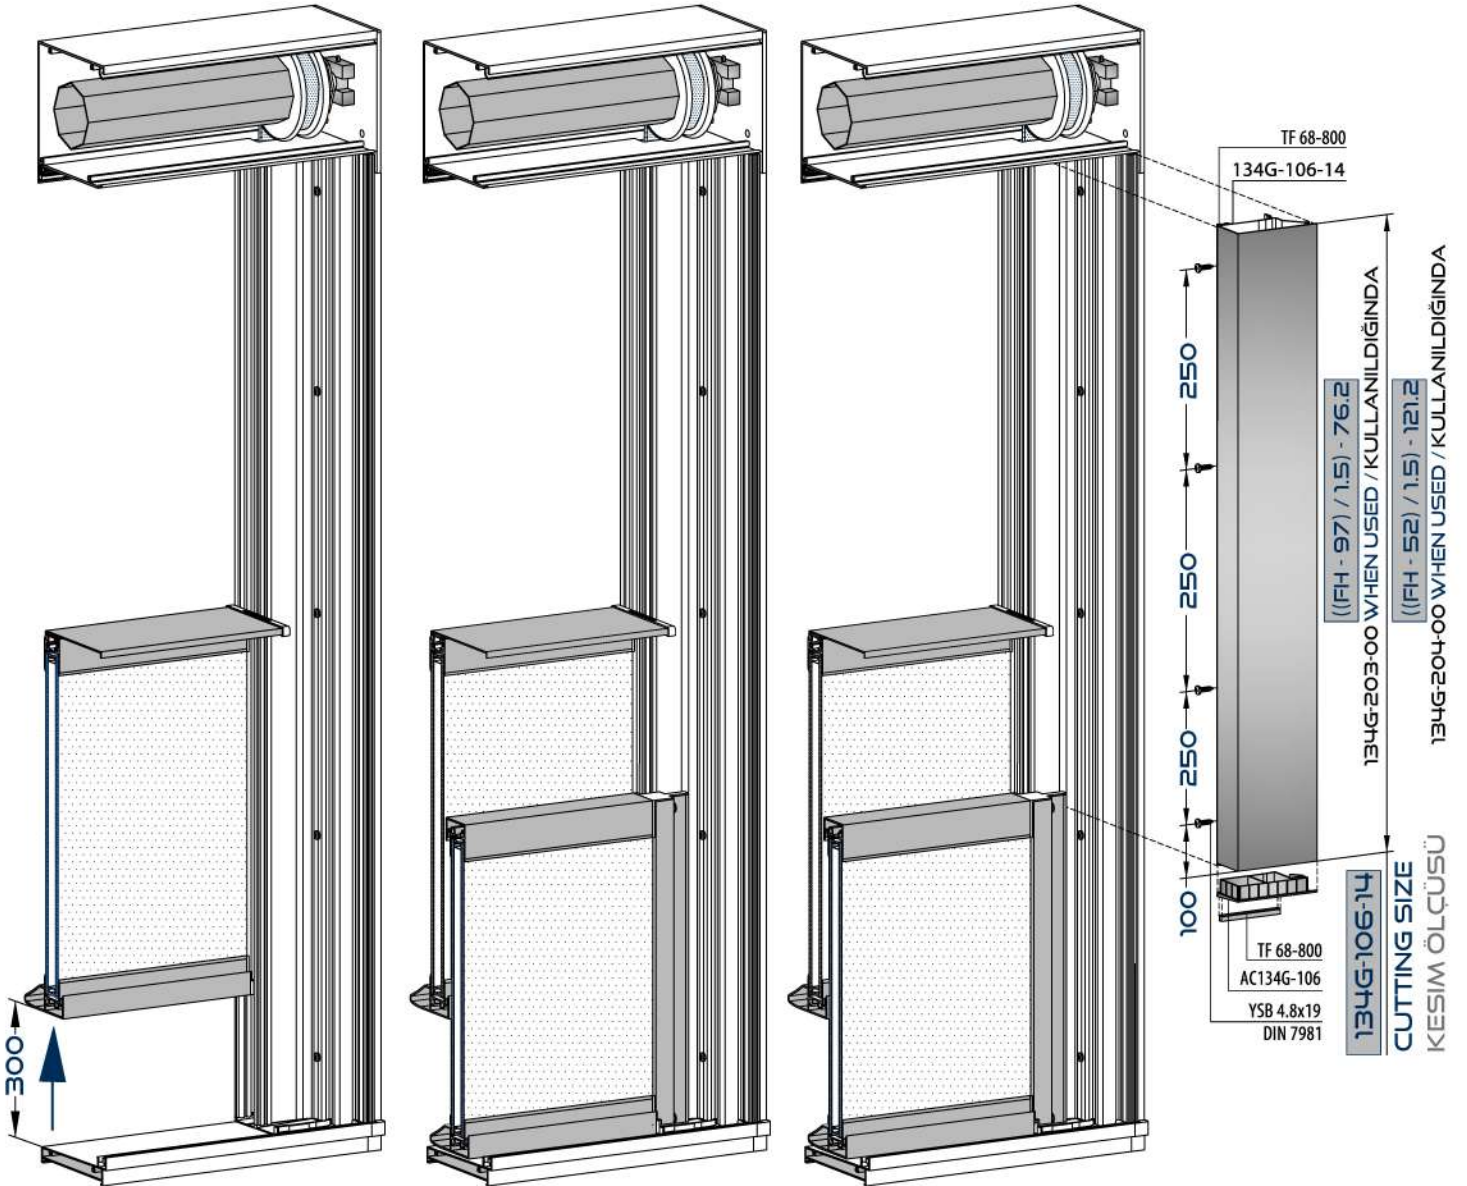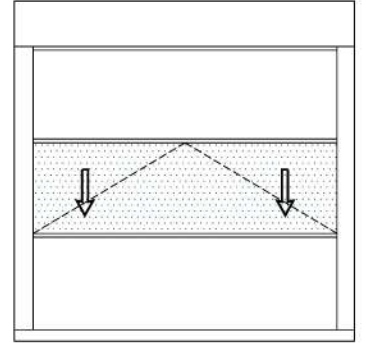


**MOVE THE FIRST SASH TO UP
BY TUBULAR MOTOR
APPROXIMATELY 300 MM
İKİ KANADI TÜP MOTOR
YARDIMI İLE YAKŞALIK
300 MM YUKARIYA KALDIRIN.**

**PUT THE SECOND SASH
ON THE PLACE.
İKİNCİ KANADI
YERINE KOYUN.**

**134G-106-14 MONTAGE
THE PROFILE
134G-106-14 NOLU PROFİLİ
YERINE MONTE EDİN.**


**BOTTOM SASH INSTALL
ALT KANADIN YERINE MONTAJI**

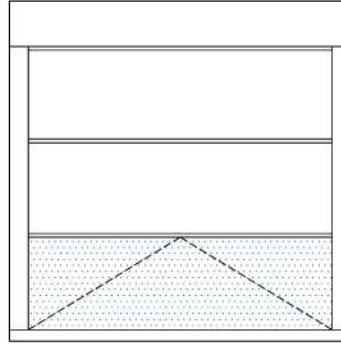


032.13.5001
**STAINLESS
LIMITERS SCISSORS**
PASLANMAZ
SINIRLAYICI MAKAS





004.10.0329
STRIKER
KARŞILIK

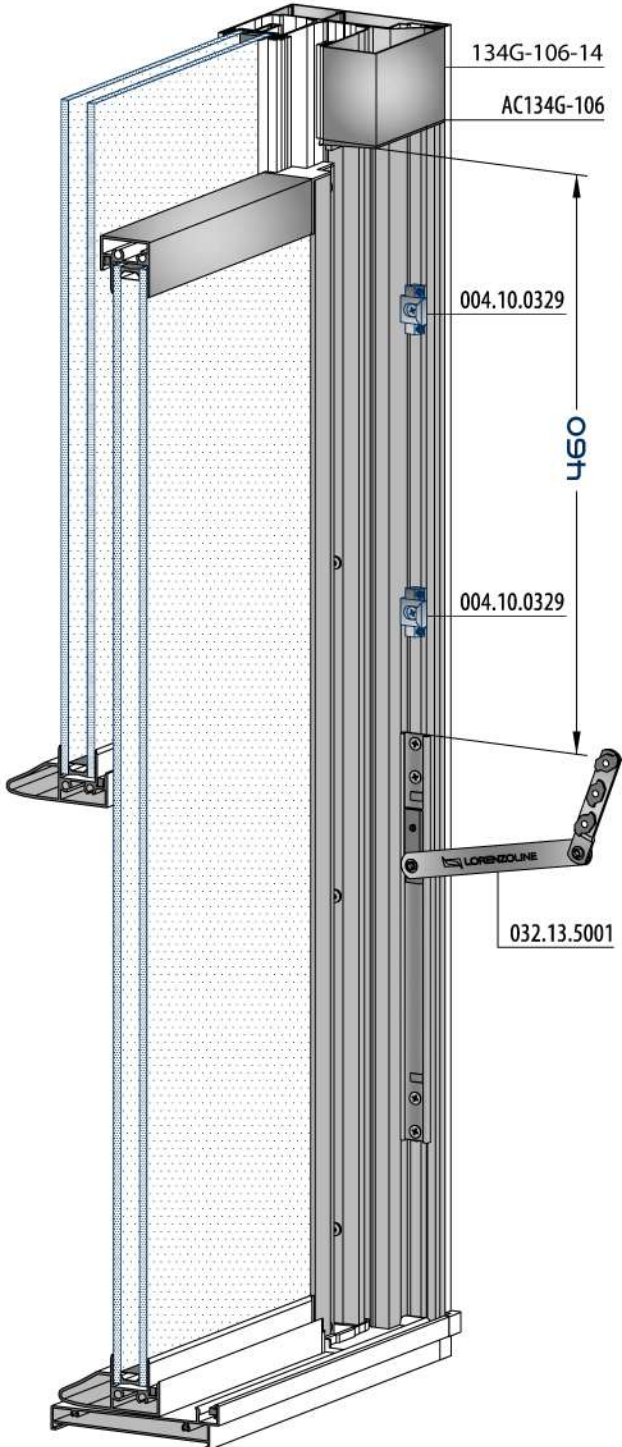


**MONTAGE THE LIMITERS
AND STRIKERS**
SINIRLANDIRICILARI VE
KARŞILIKLARI MONTE EDİN.

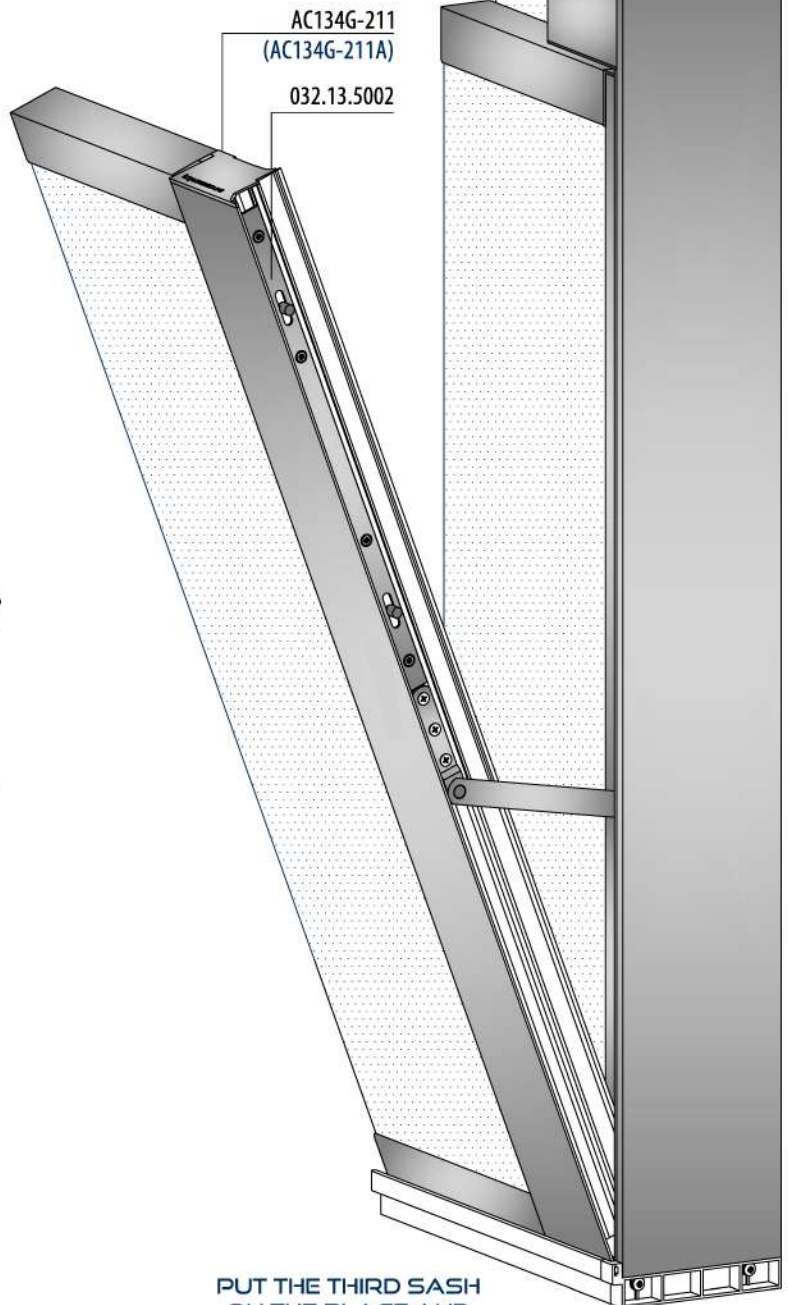

**PUT THE THIRD SASH
ON THE PLACE AND
MONTAGE THE LIMITERS**
ÜÇÜNCÜ KANADI YERINE KOYUN VE
SINIRLANDIRICILARI MONTE EDİN.

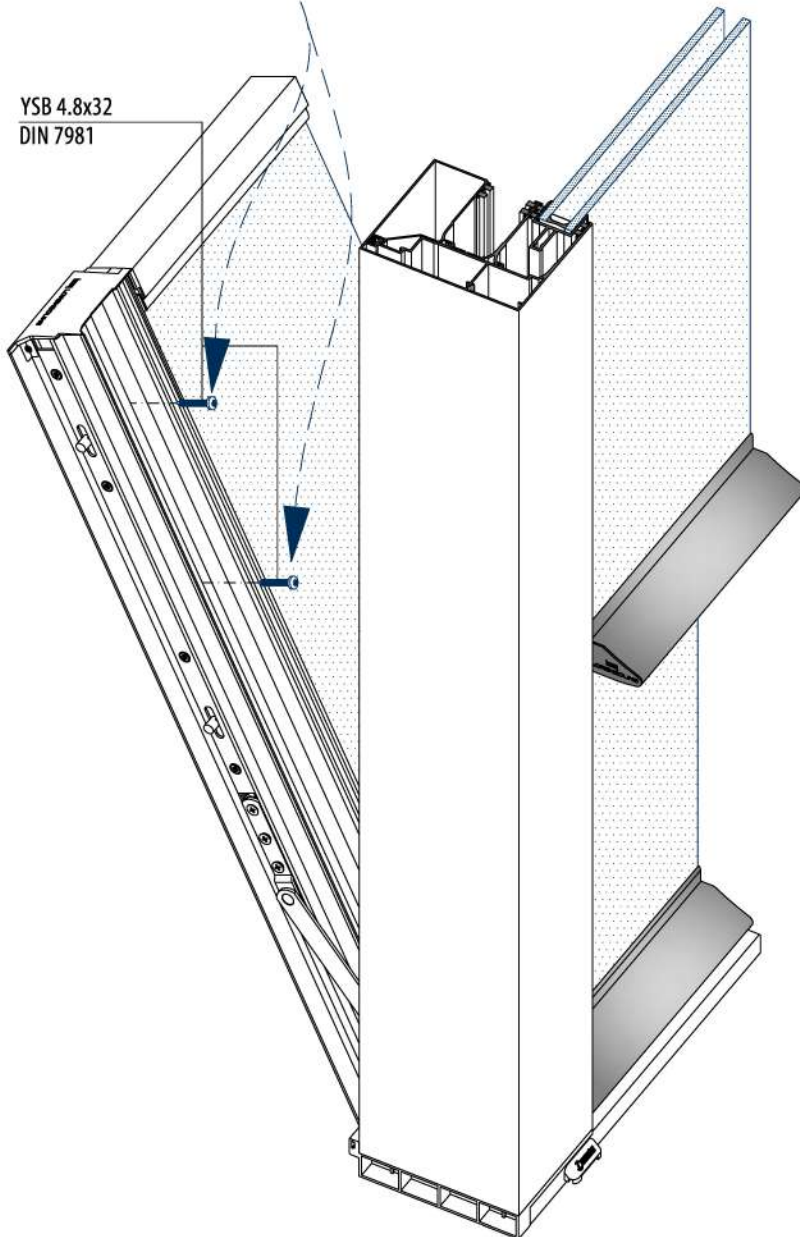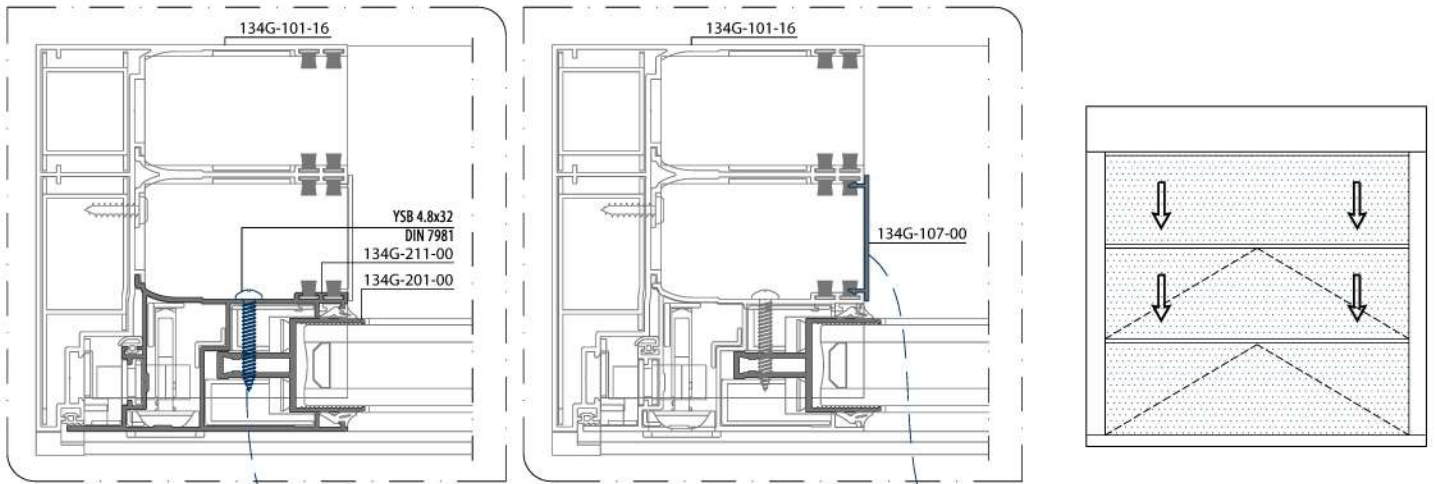

**FIX THE SASH
PROFILE BY SCREWS
KANADI VIDA İE SABİTLE**

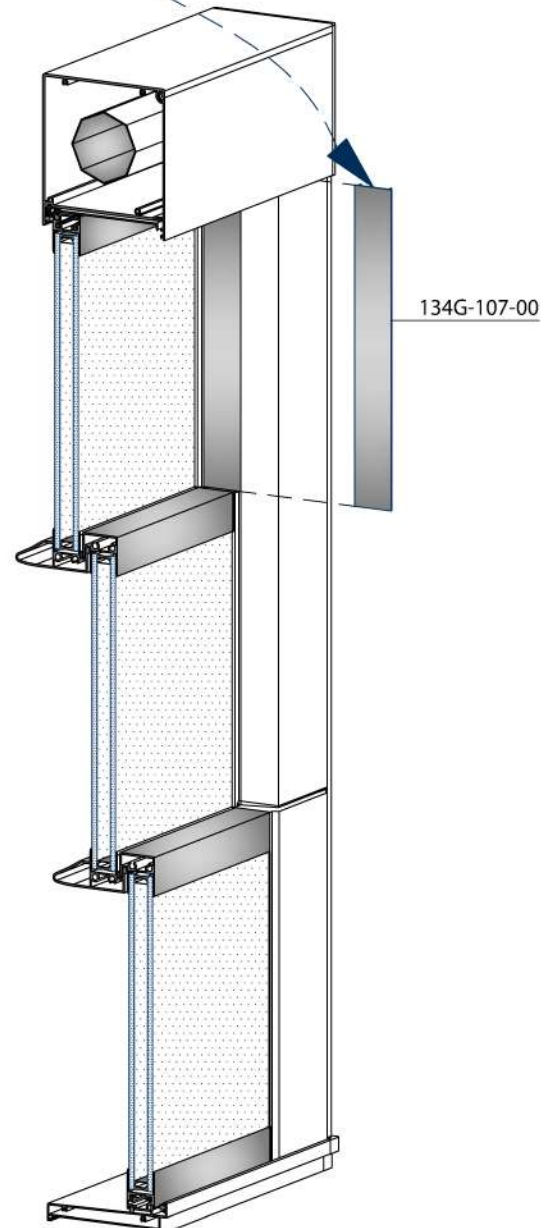

**134G-107-00 MONTAGE
THE PROFILE
134G-107-00 NOLU PROFİLİ
YERİNE MONTE EDİN.**

